



## DVD PLAYER

# DV-606D


### *Operating Instructions*

NTSC

Thank you for buying this Pioneer product.  
Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

- This player is not suitable for commercial use.

- First refer to "Before Using" on page 8 and "Connecting the Player" on pages 46 ~ 49.
- Refer to pages 10 ~ 12 for basic playback.

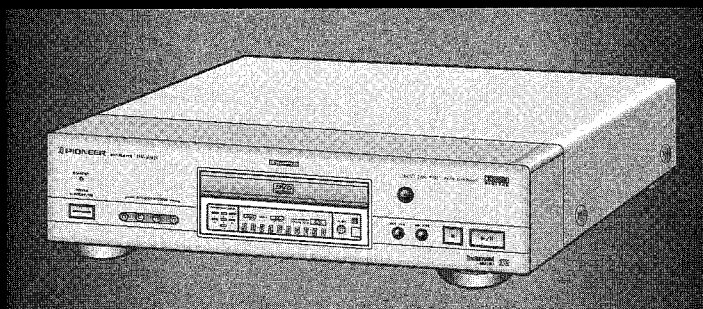

# IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

# IMPORTANT SAFETY INSTRUCTIONS

**READ INSTRUCTIONS** — All the safety and operating instructions should be read before the product is operated.

**RETAIN INSTRUCTIONS** — The safety and operating instructions should be retained for future reference.

**HEED WARNINGS** — All warnings on the product and in the operating instructions should be adhered to.

**FOLLOW INSTRUCTIONS** — All operating and use instructions should be followed.

**CLEANING** — Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzene, insecticides or other volatile liquids since they may corrode the cabinet.

**ATTACHMENTS** — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

**WATER AND MOISTURE** — Do not use this product near water — for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

**ACCESSORIES** — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

**CART** — A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



**VENTILATION** — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**POWER SOURCES** — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

**LOCATION** — The appliance should be installed in a stable location.

**NONUSE PERIODS** — The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

## GROUNDING OR POLARIZATION

• If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

• If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

**POWER-CORD PROTECTION** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

**OUTDOOR ANTENNA GROUNDING** — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

**LIGHTNING** — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

**POWER LINES** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**OVERLOADING** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

**OBJECT AND LIQUID ENTRY** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

**SERVICING** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**DAMAGE REQUIRING SERVICE** — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance — this indicates a need for service.

**REPLACEMENT PARTS** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**SAFETY CHECK** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**WALL OR CEILING MOUNTING** — The product should not be mounted to a wall or ceiling.

**HEAT** — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

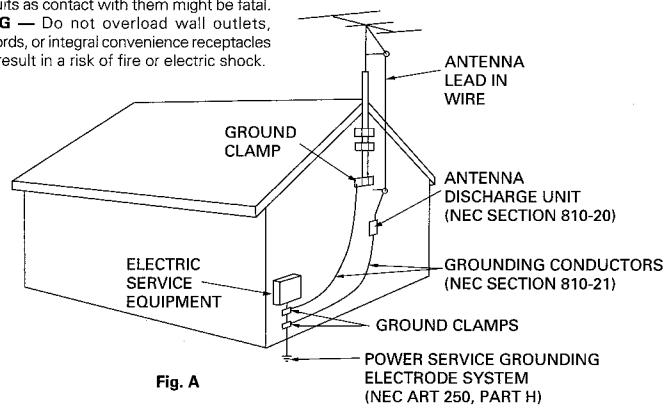


Fig. A

NEC — NATIONAL ELECTRICAL CODE

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## IMPORTANT NOTICE

### [For U.S. and Canadian models]

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

### [For Canadian model]

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

**ATTENTION:** POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

**CAUTION:** This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

THE POWER SWITCH IS SECONDARY CONNECTED AND THEREFORE DOES NOT SEPARATE THE UNIT FROM MAINS POWER IN STANDBY POSITION.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

### CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

### [For Canadian model]

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.


### [Pour le modèle Canadien]

Cet appareil numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

# See What You Can Do

## Dolby Digital\*

Connect to a Digital Surround Amp, Surround Processor and Receiver with 5.1ch input for 5.1ch Dolby Digital Surround entertainment.

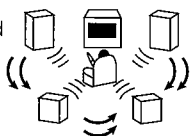


## Virtual Dolby Surround\* 1)

With Virtual Dolby you can enjoy a virtual sound presence that is three dimensional, even on the stereo system you are presently using. There may be no effect (or little effect) in some cases.



## GUI Operation

 While viewing Pioneer's original GUI on-screen displays, you can perform operations by remote control. Even if there is no menu recorded on a disc, you can still perform GUI operation with the menu provided by the player.




## Last Memory Play\*

If you stop watching a video part way through, this lets you continue watching from the same place later.



## Still Frame, Slow Play, Single Frame Advance\*

 You can view still frames, slow play, and advance one frame at a time.




## Repeat Play\*

Wide range of Repeat Play possibilities.




## Random Play\*

You can enjoy playback of tracks (or chapters) in random order.

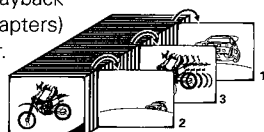

## Program Play\*

 Lets you play back selected titles and chapters in any desired order.




## Multi-Aspect\*

You can select between Regular, Wide, and Letter Box display formats.



## Cinema Mode & Animation Mode\*

 Lets you select the ideal picture quality for watching movies and animation movies.




## Condition Memory\*

The following settings of DVDs that you often watch can be recorded, and recalled automatically.

- Multi Aspect
- Cinema Mode/Animation Mode
- Multi-Language Subtitles
- Multi-Language


## Multilingual Subtitles\*

 You can select a desired subtitle language when watching movies and other videos.




## Multi-Angle\*

Lets you view scenes from different camera angles.

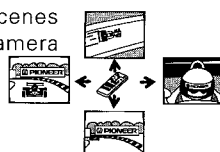

## Multiple Languages\*

 With discs that have multiple language soundtracks recorded on them, you can select the desired language.




## Parental Level\*

Lets you select a "parental level" (user restriction level) to prevent children viewing undesirable material.

## PBC Video CD Compatibility

 Ready to play Video CDs (Version 2.0) with PBC (Play Back Control). Two types of playback possible depending on the disc.



## Power On Demo Display

Switching ON the Power On Display provides a wide range of indications. To turn on the POWER ON DEMO display, press the POWER switch while pressing the ►►►► button. Press either button to turn the display off.

## DTS\*

This unit is DTS compatible. When connected to a DTS compatible amp or receiver, discs marked with the DTS symbol can be played back.

"DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc.

This product incorporates copyright protection technology that is protected by method claims of certain U. S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

1) SRS Labs, Inc.'s TruSurround system has been adopted as virtual technology. TruSurround is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. TruSurround is incorporated under license from SRS Labs, Inc.

\* Indicates this feature may not be possible with certain discs.



# Disc Types Compatible with This Unit

This player is DVD, CD, and Video CD compatible.



The marks shown on the right are found on disc labels or on disc jackets.

- This player can play all discs bearing the marks on the right without the need for an adaptor.
- To prevent malfunction, do not use an 8 cm (3 in.) adaptor (for CDs).


This unit is NTSC compatible (the U.S. and Canadian TV system). You cannot use discs other than those shown on the right.




\* During DVD playback, data transfer is at 4.7 MB per second.
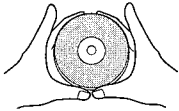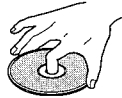
## Handling the discs

<b>Holding with both hands</b>	
<b>Holding with one hand</b>	
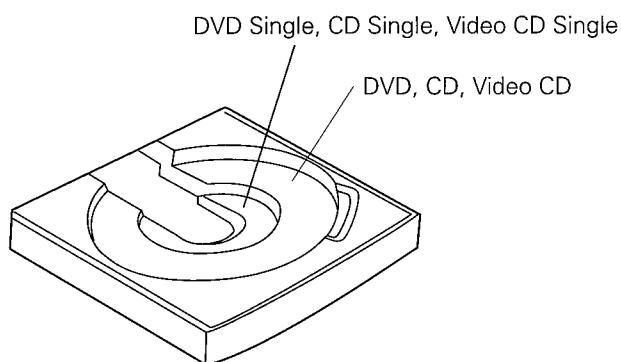
## Disc Table



Types of playable discs and their marks	Diameter/Playable sides	Playback time
<b>DVD VIDEO</b> 	DVD VIDEO*	Digital audio Digital video (MPEG 2)
	12 cm (5 in.)/ single-sided	1 layer 2 layer
	12 cm (5 in.)/ double-sided	1 layer 2 layer
	DVD VIDEO*	Digital audio Digital video (MPEG 2)
	8 cm (3 in.)/ single-sided	1 layer 2 layer
	8 cm (3 in.)/ double-sided	1 layer 2 layer
<b>VIDEO CD</b> 	VIDEO CD	Digital audio Digital video (MPEG 1) Max. 74 minutes
	VIDEO CD single	Digital audio Digital video (MPEG 1) Max. 20 minutes
<b>CD</b> 	CD	Digital audio Max. 74 minutes
	CD single	Digital audio Max. 20 minutes

**Discs other than the ones indicated above can not be played on this unit.**

To avoid damage etc., do not play any discs other than those indicated above.

Ex: DVD-Audio, DVD-ROM, CD-ROM, CD-R etc...

### Note

- ◆ Please use the DIGITAL OUT jacks when using a disc that is recorded with DTS audio, as noise will be generated from the AUDIO OUT jacks (2 CH and 5.1 CH). In this case, set the output selector to DOLBY DIGITAL • DTS. (P.42)

### Note

- ◆ You cannot play DVDs that do not bear the Region No. (refer to "Terms" on page 57) indicated on the player's rear panel.

# Contents

## Basic Operation

Playing DVDs, CDs and Video CDs  
Chapter (Track) Skip Forward/Skip Back  
Stopping Playback & Switching Power Off  
Continuing Playback From Where You Stopped

## Detailed Operation

- Playback by Menu Selection
- Searching for a Desired Video Scene (Title Search)
- Searching for a Desired Video Scene/Audio Track (Chapter Track/Time Search)
- Playback in a Desired Order (Program Play)
- Repeat Play
- Still Frame/Slow Play/Frame Advance
- Random Play

# Setting

- Multi-Aspect Setting for Wide Screen TV Software
- Changing Picture and Sound Quality
- Memorizing Settings for Often Viewed DVDs (Condition Memory)
- Selecting Languages (Multi-Language)
- Changing Audio Type
- Selecting a Subtitle Language (Multi-Language Subtitles)
- Viewing Disc Information
- 5.1 CH Mode Set-Up
- Selecting a Desired Background Color
- Outline of GUI (Graphical User Interface) Operation
- Changing Settings
- How to Set Basic Audio and Subtitles.




# Set-Up

Connecting the Player	Connection example 1. ① To a TV with Video input ② TV featuring color signal inputs
	Connection example 2. AV amplifier with digital input for Dolby Digital (AC-3)
	Connection example 3. DTS compatible amp/receiver
	Connection example 4. To a receiver with 5.1 CH input
	Connection example 5. AV amp
	Connection example 6. Digital recording components
Names and Functions	Remote Control
	Front Panel
	Rear Panel
	Display Window

## Other Information

[Troubleshooting](#)  
[For Proper and Long Use](#)  
[Terms](#)  
[Specifications](#)

# Applicable discs

		DVD 	CD 	VIDEO CD 	
10		●	●	●	Basic Operation
11		●	●	●	
12		●	●	●	
13		●		●	
16		●		●	Detailed Operation
17		●			
18		●	●	●	
19		●	●	●	
20		●	●	●	
21		●		●	
22		●	●	●	
24		●			Setting
26		●	●*	●*	
28		●			
29		●			
29			●	●	
30		●			
31		●	●	●	
32		●			
33					
34		●	●	●	
40		●	●	●	Set-Up
43		●			
46					
47					
47					
48					
49					
49					
50					Other Information
51					
51					
52					
53					Other Information
54					
56					
58					

 
\* will not operate with some modes of disc.




# Before Using

## Check accessories


Audio cord




Video cord

 

Power cord

 


Remote control unit

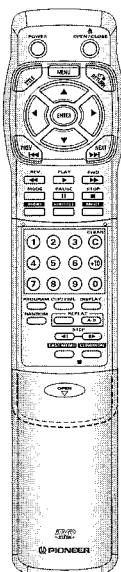

Other included items:


- Warranty card
- Operating Instructions (this manual)

Batteries....2

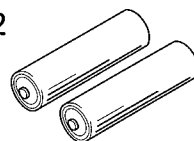


## Inserting batteries into the remote control

1

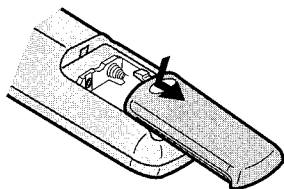

While pressing the back cover, pull out in the direction indicated by the arrow.


2

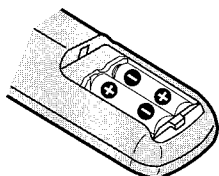

Insert batteries.

Make sure to match the plus (+) and minus (-) polarity guides on the batteries with the marks inside the battery compartment.

3

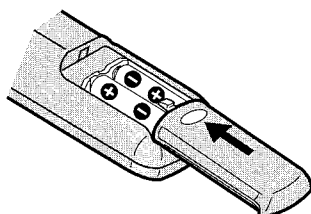

Close the cover.

### Note


- ◆ Do not mix old and new batteries.
- ◆ Even batteries of the same type will differ in voltage. Do not mix old batteries with new batteries.
- ◆ When not using the remote control for a long period of time (over 1 month), remove the batteries to avoid possible damage from battery corrosion. If battery leakage occurs, wipe the battery liquid from the battery component, then insert new batteries.

## Basic Operation

Playing DVDs, CDs and Video CDs .....	10
Chapter (Track) Skip Forward/Skip Back .....	11
Stopping Playback & Switching Power OFF .....	12
Continuing Playback from Where You Stopped ....	13



# Playing DVDs, CDs and Video CDs

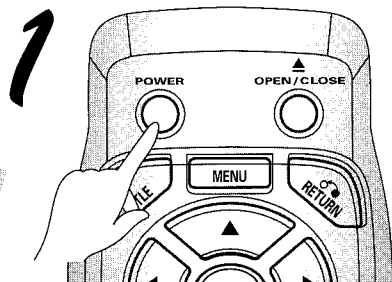


## Press the POWER button.

- The STANDBY indicator on the player turns off.


### Tips

- The FL display can be turned off by pressing the FL OFF button on the main unit. At this time the indicator in the button will light.

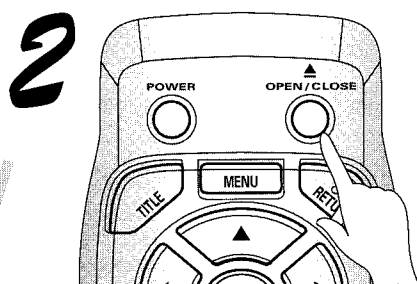


## Press the OPEN/CLOSE button.

- Press the ▲ button on the front of the player.
- The disc table comes out.

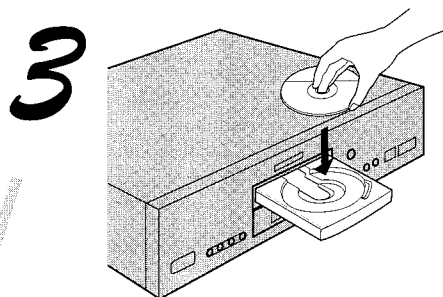

## Load a disc.

- Load a disc with the label side facing up, using the disc table guide to align the disc.

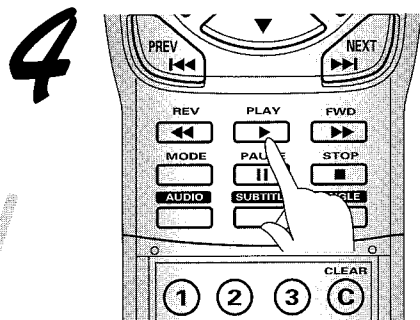


## Press the PLAY button.

- The disc table will close, and playback will begin.
- Press the ►/|| button on the front of the player.
- Depending on the disc, a menu is displayed. If a menu is displayed, refer to page 16.


### Note

- ◆ Noise will be generated from the output when a DTS audio disc other than DVD is played back. When playing a DTS audio disc other than DVD, use the DIGITAL OUT jacks and not the AUDIO OUT jacks. (Refer to p.47 and 48). Also, please use a DTS compatible amp or receiver.
- ◆ You cannot play DVDs that have no region number. (refer to page 57).
- ◆ On DVD discs, only DVD VIDEO discs can be played back.
- ◆ During operation, the following marks may appear on the TV screen.
- : Appears when this player cannot perform the selected function.
- : Appears when the disc cannot perform the selected function.

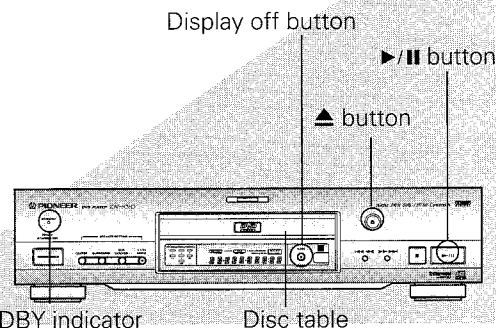

# Chapter (Track) Skip Forward/Skip Back


## Skipping forward to the next chapter (track)

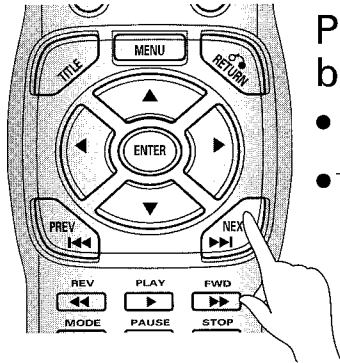

Press the **NEXT** button.

- Press to skip forward to the next chapter (track).
- The button on the front panel has the same function.


## Skipping back to the previous chapter (track)

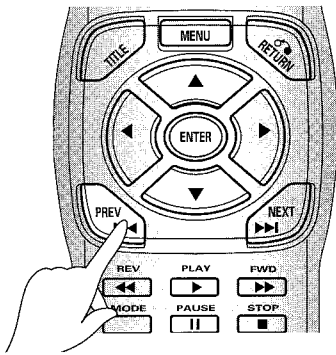

Press the **PREV** button.

- Press once to skip back to the start of the chapter (track) currently playing.
- Press again to skip back to the start of the previous chapter (track).
- The button on the front panel has the same function.


## Fast forward

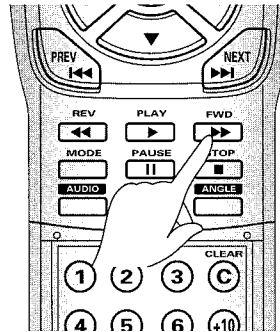

Press and hold the **FWD** button.




- Release the **FWD** button when you reach the desired location. Normal playback resumes.
- The button on the front panel has the same function.
- When the "SCAN" indicator on the screen changes from flashing to lit, fast forward will continue even if the button is released. When the desired location has been reached, press the play button.

## Fast reverse

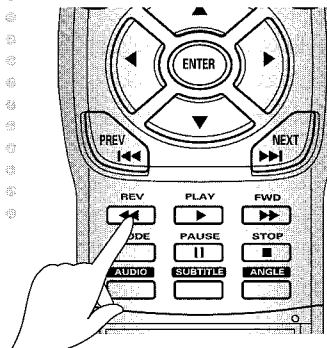


Continue pressing the **REV** button.

 - Release the **REV** button when you reach the desired location. Normal playback resumes.
- The button on the front panel has the same function.
- When the "SCAN" indicator on the screen changes from flashing to lit, fast reverse will continue even if the button is released. When the desired location has been reached, press the play button.

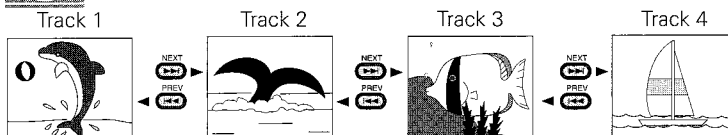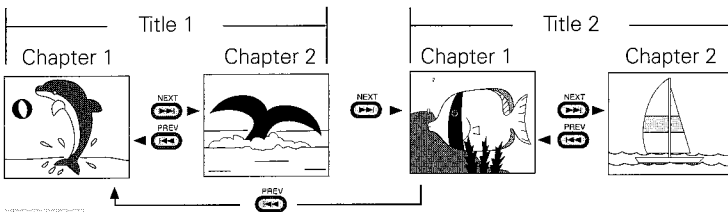


button  
button

 

# Stopping Playback & Switching Power OFF


1

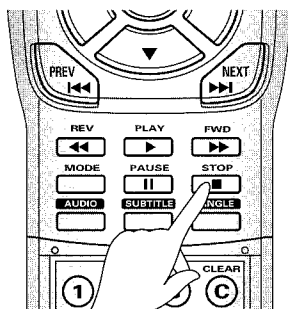

Press the STOP ■ button.

- On the front panel, press ■.
- Playback stops.

2

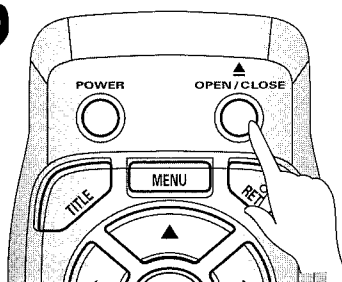


Press the OPEN/CLOSE ▲ button.

- On the front panel, press ▲.
- The disc table comes out.

## Note


- ◆ You can stop part way through and continue playback later from the point where you stopped. Refer to page 13.

3

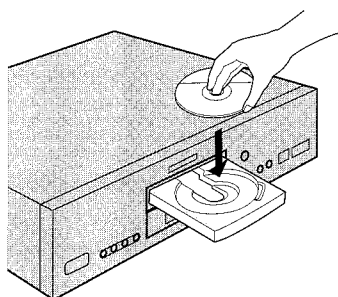

Remove the disc.

4

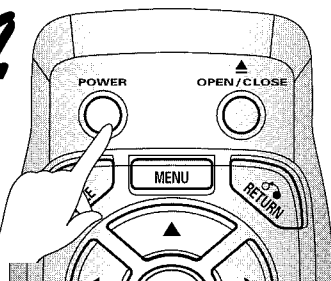

Press the POWER button.

 
- The disc table goes back in, power switches OFF, and the STANDBY indicator lights.

STANDBY indicator

▲ button

POWER button


■ button






# Continuing Playback from Where You Stopped

## Memorizing the place where you stopped watching (LAST MEMORY)

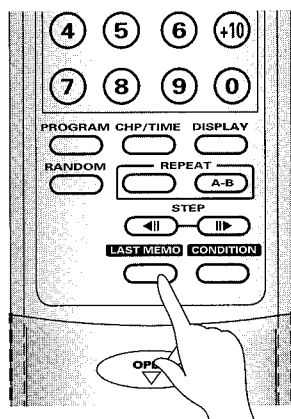


### Press the LAST MEMO button during play.

- The LAST MEMORY indicator lights on the player.
- Press the POWER button to switch power OFF, or press the STOP ■ button to stop playback.

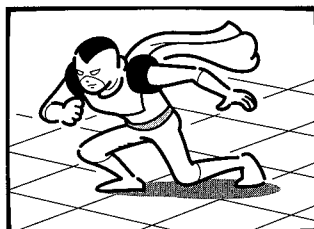


- On DVDs, LAST MEMORY memorizes video, audio, display, mode, and other settings as well as the place where playback stopped.
- Even with a disc you have memorized with LAST MEMORY, playback begins at the start of the disc if you press the PLAY ► button.
- When you continue playback from the point where you stopped, LAST MEMORY is automatically canceled for that disc.
- If you register more than five DVDs in LAST MEMORY, details of the latest disc are memorized, while details of the least recent disc (the disc you registered first) are erased.
- When a Video CD is ejected, memorized data will be cleared.
- In the case of DVDs, the Last Memory mode may not function for some titles.

## Resuming playback from where you stopped

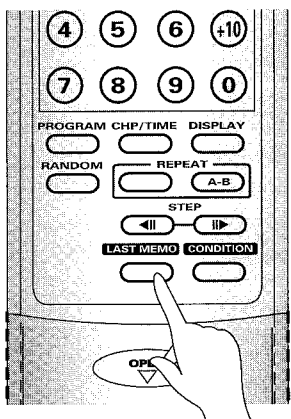

### Press the LAST MEMO button during STOP.


- When the power is turned off and a disc inserted, the power will be turned on and playback will start automatically.

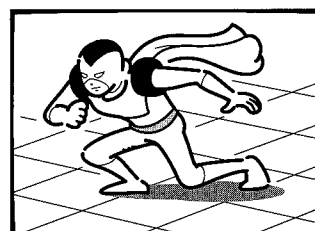

### Note

- ◆ Resuming play is not possible with CDs. You cannot use it with CDs, and other discs.
- ◆ When there is a power outage or you disconnect the player from the wall outlet while the power is ON, settings are cleared. If you do disconnect the power cord, be sure to turn the display window's "— OFF —" display off with the player's POWER button or the remote control's power button.
- ◆ When PBC playback is engaged on Video CDs, continuous playback may not be possible.


LAST MEMORY indicator

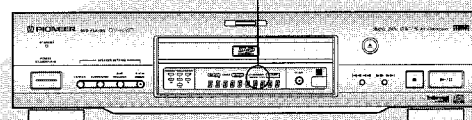



## Detailed Operation

Playback by Menu Selection .....	16
Searching for a Desired Video Scene (Title Search) .....	17
Searching for a Desired Video Scene/Audio Track (Chapter/Track/Time Search) .....	18
Playback in a Desired Order (Program Play) .....	19
Repeat Play .....	20
Still Frame/Slow Play/Frame Advance .....	21
Random Play .....	22

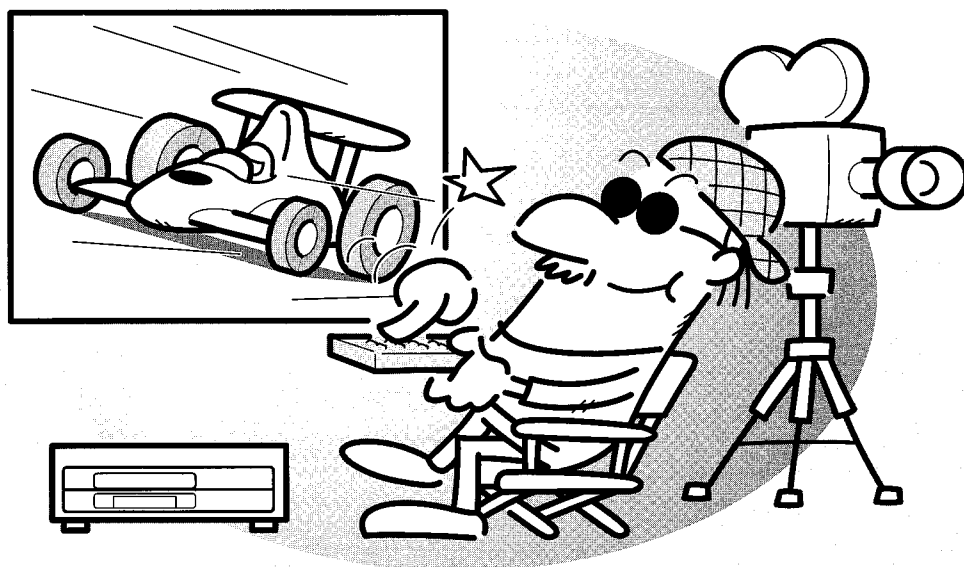

# Playback By Menu Selection

DVDs and Video CDs, depending on the disc, feature selection menus. This player lets you choose a desired title or track by selecting from a menu.

## Selection and playback from a menu

① Press .

- A menu is displayed. This menu is recorded on the disc. Menus differ depending on the disc.
- On Video CDs that have Play Back Control, PBC is indicated in the display window.



② For example, to select ② JAZZ, press the ② number button.

- When selecting a number higher than 10, use the button.
- When selecting 10, press → .
- When selecting 17, press → .
- When selecting 20, press → → .
- The selected title or track starts playing.
- On DVDs, you can also select numbers with the and buttons and the press .

### Tips

- Menu details differ depending on the disc. Play a disc by making menu selections using the direction buttons (, , , ), and the number buttons.
- You can also play Video CDs without calling up a menu by pressing a number button during STOP. For example, to start playback from track 1, press the .
- For some titles, selection can be made using the menu. In this case press the while the indicator is displayed, display the menu screen and make your selection.

## Returning to menu display during playback

During DVD playback

① Press .

② Press .

- Press button again for a menu of title contents.
- Operate according to disc menus.

During Video CD playback

Press .


Pressing the button during PCB playback will display the menu. With PBC playback, because the player's operation method and functions depend on the PBC signal recorded on the disc, they will differ according to the disc. For details, please refer to the disc's instruction manual.

### Note




- ◆ When using a menu for Video CD playback; Program, Random, Repeat Play and Track/Time Search functions do not operate.
- ◆ On Video CDs when PBC is ON, player operation differs depending on the disc. For details, read the instructions that come with the disc.
- ◆ On DVDs, menu indications may not be displayed.



Title 1

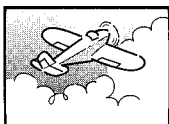

Title 2

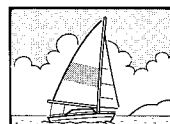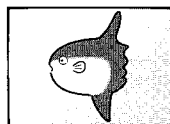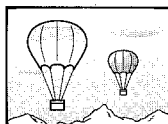

## Searching for a Desired Video Scene (Title Search)

### Direct search with title numbers

- 1 Press during playback.  
(During the stop mode, proceed to step 2 without pressing the .)

TITLE 1

- Title numbers flash on screen.

- 2 Selecting title numbers directly with the number buttons.

- When selecting title number 3, press

TITLE 3

- When selecting title number 10, press →


TITLE 10

- Pressing and holding the while the TITLE number is flashing will advance the TITLE number one by one. Selection can be made by selecting the desired number and pressing the .


### Searching with the menu

- 1 Press .
- (If the stop mode is engaged, proceed to step 3.)

- 2 During playback, proceed to step .

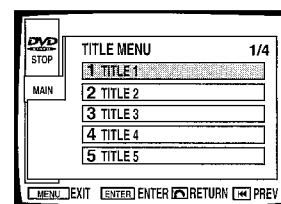

- 3 Select a title number using the and .

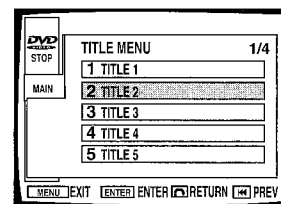

- 4 Press .

- Playback of the selected title starts.

#### Note

- ◆ You cannot play back successive titles.
- ◆ To play back multiple successive titles, program the titles and then perform Program playback.
- ◆ On certain DVDs, the search operation may stop. In this case, the mark is displayed.
- ◆ Menus may not be displayed on some discs.


#### Tips

- Direct selection is also possible using the number buttons. The selected title will be playback immediately.
- For some titles, selection can be made using the menu. In this case press the while the indicator is displayed, display the menu screen and make your selection.

Chapter 1




Chapter 2

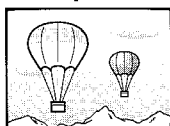

Chapter 3



Chapter 4

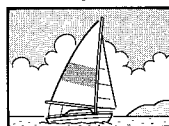


# Searching for a Desired Video Scene/Audio Track (Chapter/Track/Time Search)

There are 3 search functions available for DVD discs and Video CDs: Normal search, Direct search and Time search. For CDs, Direct search is possible.


## Searching by chapter/track number.

### Direct search using number buttons.

 Example 1: To select chapter/track number 3



Example 2: To select chapter/track number 17

 

- During the stop mode on a DVD, use the "Searching For a desired Video Scene (Title search)" (p. 17)


### When the chapter/track number is large

① Press **CHP/TIME**.

- Chapter/track numbers flash on screen.
- On DVDs, the menu may be displayed during the stop mode. In this case, please refer "Chapter Number Search with the menu" on the right.

② Select chapter numbers directly with the number buttons.

 Example 1: To select chapter/track number 31



Example 2: To select chapter number 187




③ Press **PLAY**.

- Playback of the selected chapter/track starts.
- On DVDs, you cannot search for chapter that overlap titles.

### Note

- Time search is not possible with CDs.
- On DVDs, Time search may be possible with certain titles. In this case, the mark is displayed.
- When performing DVD Time Search, playback may start from a slightly different time than that specified.
- On DVDs, Time search is not possible during the stop mode.
- Search using the above operation is not possible during PBC playback of Video CDs.

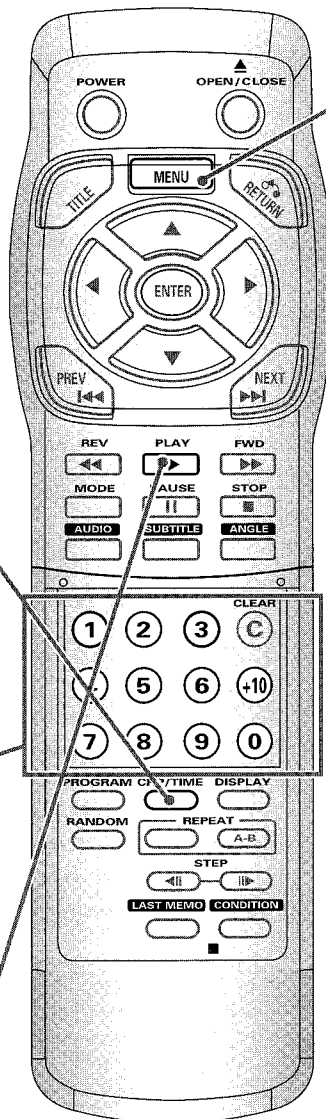

## Chapter Number Search with the menu


This operation is for DVDs only.

① Press **CHP/TIME**.

- If the stop mode is engaged, proceed to step 3.

② Press **MENU**.

- Chapter menu is displayed.

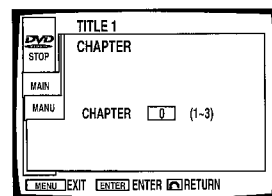

③ Selection according to screen displays.

- Depending on the title, the menu may not be displayed. In this case, please refer to the method on the left.

## Searching by time

(Time search)



① Press **CHP/TIME** twice to.



- On DVDs that do not have chapters, pressing the button once will display the time.

② Select the desired time number with the number buttons.

  Example 1: To select 21 minutes 43 seconds



- On DVDs, a time can not be selected between titles.

③ Press **PLAY**.

- Playback starts from the selected elapsed play time.


### Tips

- To clear Title, Chapter, and Time indications when they are flashing, press the **CLEAR** button twice.
- For some titles, selection can be made using the menu. In this case press the **MENU** button while the indicator is displayed, display the menu screen and make your selection.

# Playback in a Desired Order


## Programming (DVD)

- 1 Press **PROGRAM**.
- 2 Select the program type with the number buttons.

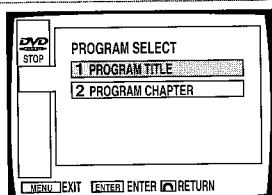



- 3 When chapter programming was selected, first press the **ENTER** button to move to TITLE, then use the number buttons to select the title that contains the chapter to be programmed.

- When title programming was selected, follow procedure 4.

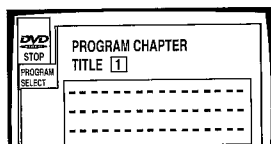

- 4 Programming DVD titles/chapters 9, 7, and 18 in order.

9 → 7 → +10 → 8

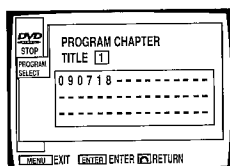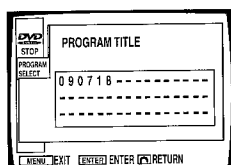

- 5 Press **ENTER**.

- Playback starts in the set order.

### Tips

- You can program up to 24 steps.
- If you press the wrong number button, press **CLEAR** button and then press the correct number button.
- Program play is not possible with discs that have no chapter numbers recorded on them.
- Pressing **PAUSE** button during programming:  
If you press **PAUSE** button instead of a number button, **II** is displayed indicating that a pause has been programmed.

## Program setting (Video CDs, CDs)

- 1 Press **PROGRAM**.
- 2 Programming tracks 9, 7, and 18 in order.  
9 → 7 → +10 → 8  
Press the number buttons in order.
- 3 Press **ENTER**.

- Playback starts in the specified track order.

## Confirmation, addition or cancellation of programs

- 1 Press the **PROGRAM** button.
- 2 In the case of a DVD, press the number buttons to select the program type, and then press **ENTER**.
- 3 To add to the program, select the song with the number buttons and then press **PROGRAM**.
- 4 To cancel the program, select the song with the **CLEAR** button, and then press the **C** button.

- Confirmation can be made with the above procedure.
- Program additions can be made with the above procedure.
- The complete program will be canceled, even when the disc table is open.


## Stopping program play

Press **STOP**.

- Program play stops.

### Note

- ◆ You cannot program when playing a Video CD using menu selections (during PBC).
- ◆ When moving chapters, chapter not programmed may appear on screen, but this is not a malfunction.
- ◆ Programming may not be possible with certain DVD discs. On these types of discs, the **SC** mark will appear on the screen when programming is attempted.
- ◆ Only chapters within the same title can be programmed during chapter programming.

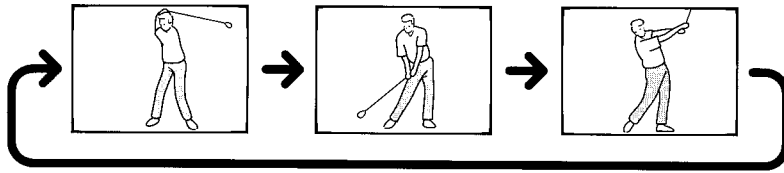

# Repeat Play

## Repeat play of a chapter/track

Press **REPEAT** once during playback of the chapter or track you want to repeat.

## Repeat play of a title

Press **REPEAT** twice during playback of the title or track you want to repeat.

- On DVDs, the title continues playing until the end, and then playback starts once more from the beginning of that title.
- On CDs and Video CDs, a disc is title, so the entire disc is repeated.

## Repeat play of a specified section


Press **REPEAT A-B** at the beginning and end of the section you want to repeat.

## Return to a specified location

① Press **REPEAT A-B** at the desired location.

② When you want to return, press **PLAY**.

- Press **CLEAR** button to clear a specified location.

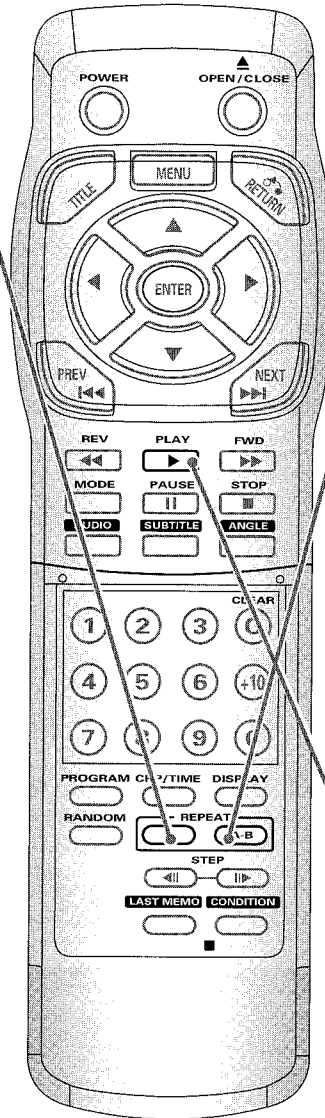

### Tips

- Press the **REPEAT** button during program playback to repeat playback of the program.
- Press **CLEAR** to cancel Repeat play. The Repeat play mode is canceled, but playback continues.
- On DVDs, repeat playback between titles is not possible.

### Note

- ◆ On some DVD discs, there may be times when Repeat playback is not possible because of the title. In this case, the mark will appear on the screen.
- ◆ On Video CDs, Repeat play is not possible during playback with the menu displayed (PBC playback). To perform Repeat play, start playback without displaying a menu (refer to page 16), and press **REPEAT** button.





# Still Frame/Slow Play Frame Advance

## Frame by frame advance playback: The picture can be viewed one frame at a time.

① Press .

 
② Press the or .

- : The picture will be advanced by one frame each time the button is pressed
- : The picture will be backed up little by little each time the button is pressed. (DVD only)

## Slow playback- Viewing a slow picture

Press and hold the during playback.

Slow playback will be engaged. During slow playback, the slow playback speed can be selected with the and buttons.





Press and hold the button during DVD playback.

Slow playback in the reverse direction will be engaged.



- To return to normal playback, press (or the button on the player).

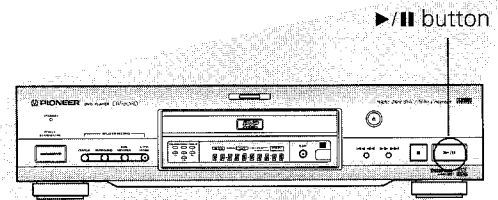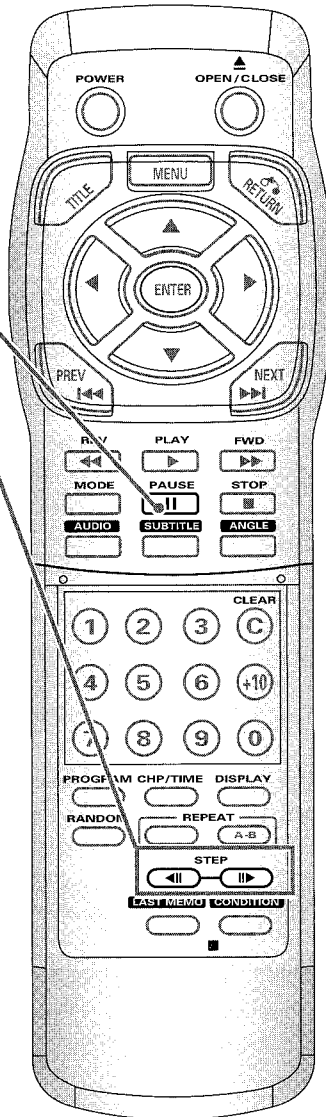

Detailed  
Operation

## Viewing a still frame


Press .

- Press the button on the front of the player.
- If the still picture shakes on a DVD, refer to page 26 and select the "FIELD" setting.

### Note

- Still frame, frame by frame advancement and slow playback audio will not be heard.
- Pause may not be possible with certain discs. In this case, the mark is displayed.

# Random Play

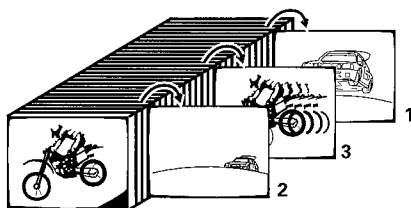

## On DVDs....

### Random playback of chapters within one title

Press **RANDOM** once, then press



- "RANDOM CHP" will appear on the screen, and chapters within the title will be played back in a random order.

### Random playback of titles

Press **RANDOM** twice, then press



- "RANDOM TITLE" will appear on the screen, and titles will be played back in a random order.

## On CDs, Video CDs....


### Random playback

Press **RANDOM**.

- "RANDOM" will appear on the screen, and random playback will begin.

#### During Random play:

- Press **NEXT** button, and the player's next selection starts playing.
- Press **PREV** button, and playback of the current selection starts again from the beginning.

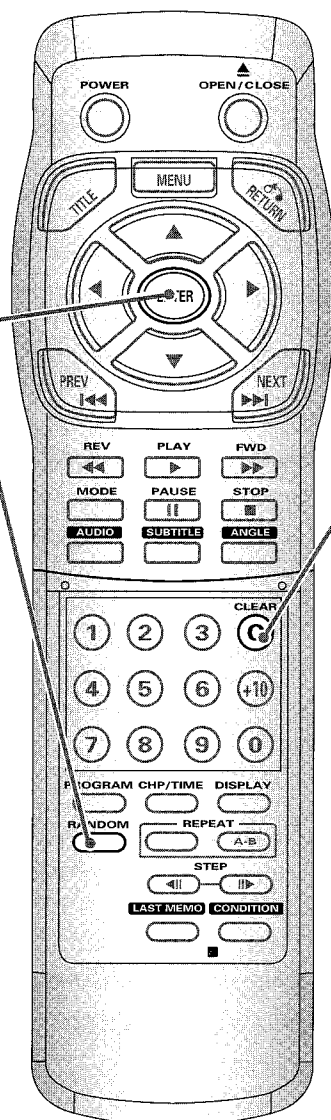

### Stopping random play

Press **CLEAR**.


- This returns you to normal playback of chapters/tracks in order from the chapter/track currently playing.

#### Note

- ◆ On Video CDs, Random play is not possible during playback with the menu displayed (PBC playback). To perform Random play, start playback without displaying a menu (refer to page 16), and press **RANDOM** button.
- ◆ Random play of programmed chapters/tracks is not possible.
- ◆ In the case of DVDs, random playback may not be possible with some titles.
- ◆ Repeat playback of random playback is not possible.

# Setting

Multi-Aspect Setting for Wide Screen TV Software .....	24
Changing Picture and Sound Quality .....	26
Memorizing Settings for Often Viewed DVDs (Condition Memory) .....	28
Selecting Languages (Multi-Language) .....	29
Changing Audio Type .....	29
Selecting a Subtitle Language (Multi-Language Subtitles) .....	30
Viewing Disc Information .....	31
5.1 CH Mode Set-Up .....	32
Selecting a Desired Background Color .....	33
Outline of GUI (Graphical User Interface) Operation .....	34
Changing Settings .....	40
How to Set Basic Audio and Subtitles .....	43


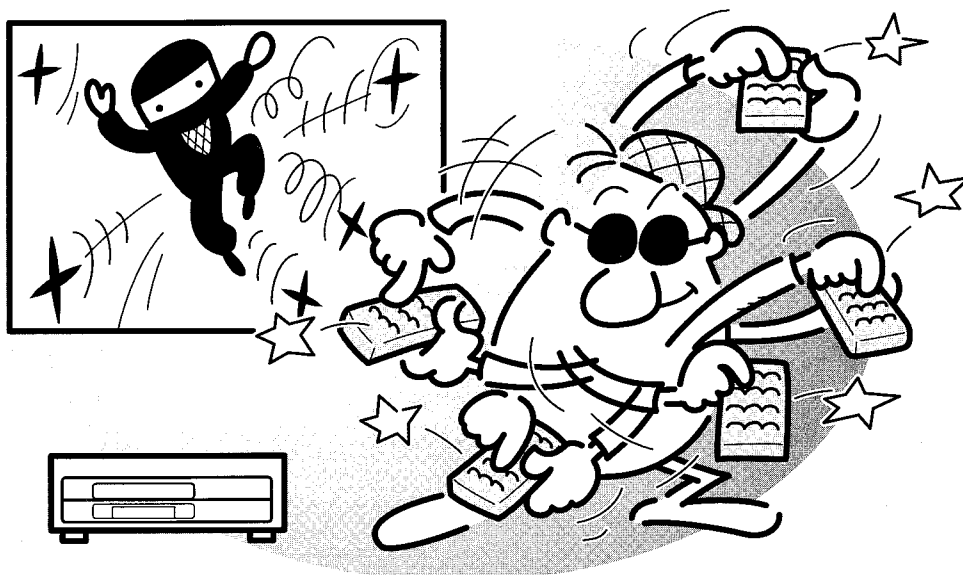




# Multi-Aspect Setting for Wide Screen TV Software



Certain DVDs feature image data recorded with the "squeeze" recording system for wide screen viewing. When watching this kind of DVD on a conventional TV, the picture may appear vertically squeezed. If this occurs, you can use the Multi-Aspect function to achieve a normal picture.

## 1. Press **MENU** during stop.

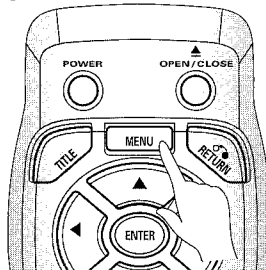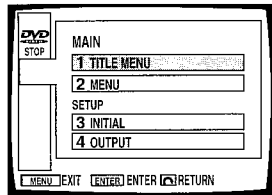



- The set-up menu is displayed.

## 2. Select initial set-up with .

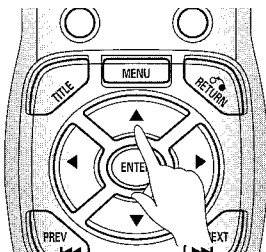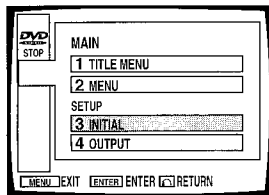



- The initial set-up button will be displayed in blue.

## 3. Press **ENTER**.

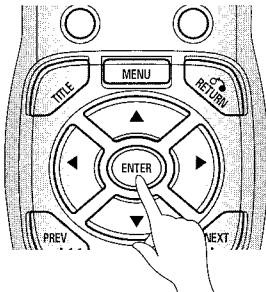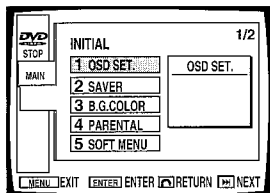



- The initial set-up screen will be displayed.

## 4. Select ASPECT using buttons.

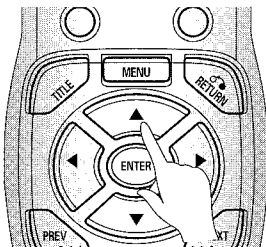
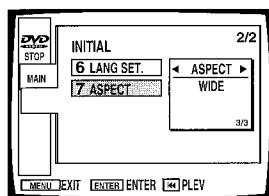


- Pressing and holding the  button will display the next page's screen shown above.


## 5. Press **ENTER**.

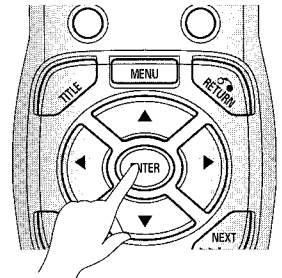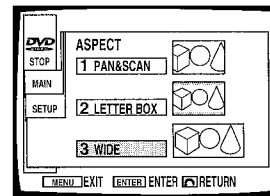

## 6. Select the desired mode (PAN & SCAN, LETTER BOX, WIDE) with the buttons.

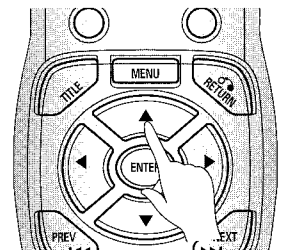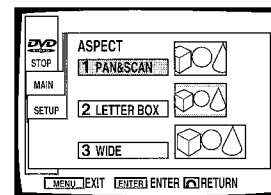

## 7. Press **ENTER**.

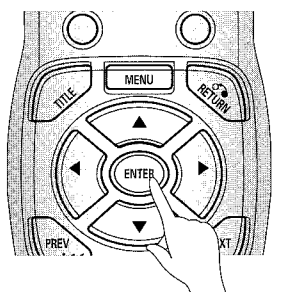


- The picture changes to the desired type.



For DVDs where aspect switching is possible, select the aspect that matches the TV.

Disc	Aspect selection	Wide TV (16:9)	Regular TV (4:3)
(16:9)	Wide		
	Pan & scan		
	Letter box		
(4:3)			

When the above chart's  is selected, the picture with the correct height to width ratio will be selected. Whether aspect can be switched or not depends on the disc. Please refer to the information written on the disc's jacket etc.

For discs where aspect selection is not possible, make the screen adjustment using the TV's controls.

**Note**


- ◆ When there is a power outage or you disconnect the player from the wall outlet while the power is ON, settings are cleared. If you do disconnect the power cord, be sure to turn the display window's "– OFF –" display off with the player's POWER button or the remote control's power button.

**Tips**

- The width-to-height ratio of conventional TVs is 4:3, while the width-to-height ratio of wide screen and Hi-Vision TVs is 16:9. This width-to-height ratio is called the aspect ratio.

# Changing Picture and Sound Quality.

The setting changes as follows according to how many times the **MODE** button is pressed.

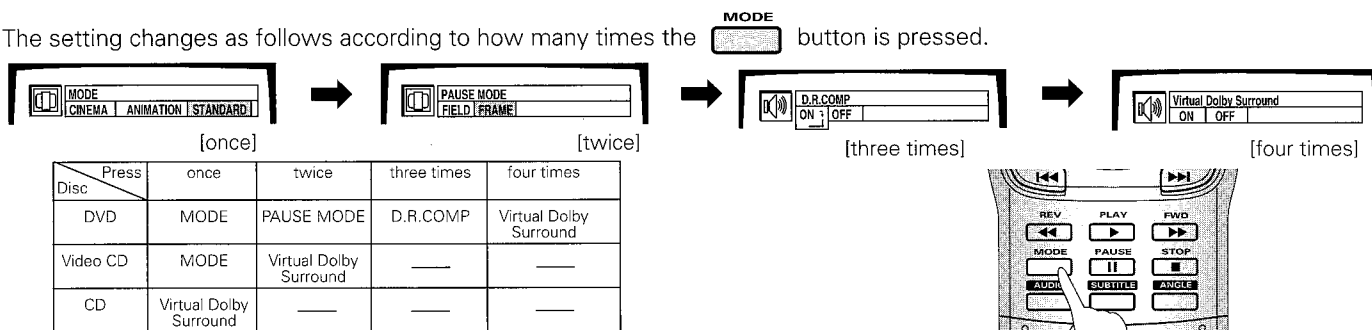



## Changing picture quality

### (Cinema Mode/Animation Mode)

This lets you select the ideal picture quality for watching regular movies, animation movies, and other video material.



 1. During playback, press **MODE** to select "MODE".

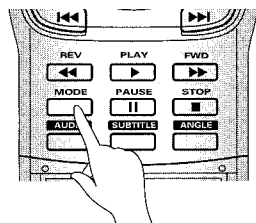

#### CINEMA

Picture quality: Provides a sharp, clear black picture for images with high contrast.

#### ANIMATION

Picture quality: Provides images with bright, clear colors.


#### STANDARD

Returns you to normal picture quality and display.

#### Note

- ◆ Depending on the contents of the software and the TV used, the picture may be unclear. In this case, switch to the Standard mode.

2. Select the desired mode with the **LEFT** and **RIGHT** buttons.


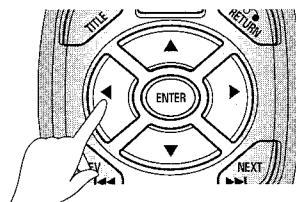


## Changing the still picture condition




There may be picture shake during the still picture mode. In this case, setting the pause mode to the field mode will eliminate the problem.

 1. During playback, press **MODE** to select "PAUSE MODE".

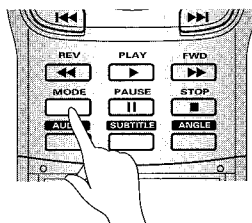

2. Select the **FIELD** or **FRAME** with the **LEFT** and **RIGHT** buttons.

Changes each time pressed.


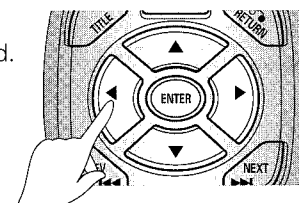


## Changing the sound quality (D.R.COMP)





D.R.COMP stands for Dynamic Range Compression. DVDs provide sound with wide dynamic range. Switch D.R.COMP ON if you find dialog or other sounds hard to hear when listening on your stereo system or TV.

 
1. During playback, press the **MODE** button to select "D.R. COMP".

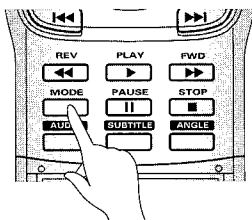


 
3. Press **ENTER** when "VARIABLE" is selected.

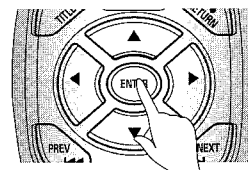


2. Select "ON" or "OFF" with the **left/right arrow** buttons.

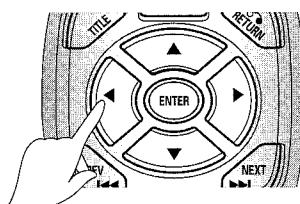

 4. Adjust the amount of change with the **left/right arrow** buttons.

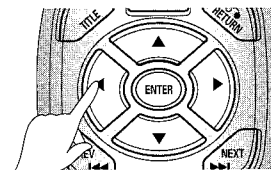

5. Press **ENTER**.

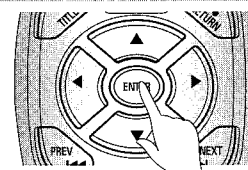

### Note

- ◆ This feature may not operate for some discs.

### Tips


 
If **left/right arrow** or **up/down arrow** is pressed during step 4, change will be in the order of "ON" or "OFF".

## Selecting a theater like 3-dimensional sound image (Virtual Dolby Surround **TruSurround** with SRS )





This feature only operates for audio output from the AUDIO OUT jack. It will not operate for audio output from the DIGITAL OUT jacks.

1. During playback, press the **MODE** button to select "Virtual Dolby Surround".

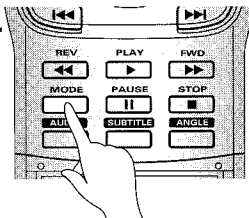

 2. Select "ON" with the **left/right arrow** buttons.

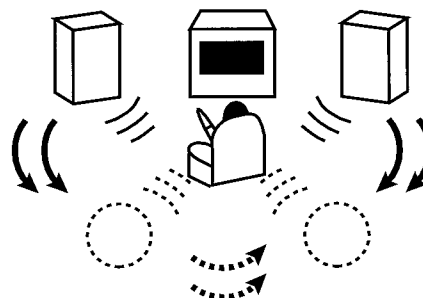

SRS Labs, Inc.'s TruSurround system has been adopted as virtual technology. TruSurround is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries.

TruSurround is incorporated under license from SRS Labs, Inc.

### Note

- ◆ When using this feature for a DVD disc, please select the 2 CH mode.
- ◆ This feature will not operate for discs sampled at 96kHz.






# Memorizing Settings for Often Viewed DVDs (Condition Memory)

You can store settings for DVDs you often watch in memory. Settings remain in memory even if you remove the disc from the player, or switch power to the player OFF. If you load a disc that has its settings memorized, the Condition indicator lights. When you start playing the disc, the memorized settings are automatically recalled.

You can memorize details for the following five settings. Once memorized, Condition Memory will automatically recall the settings.

Multi-Aspect (page 24)  
Cinema mode/Animation mode (page 26)  
Multi-language (page 29)  
Multi-language subtitles (page 30)  
Position (page 39)

Press **CONDITION** during playback.

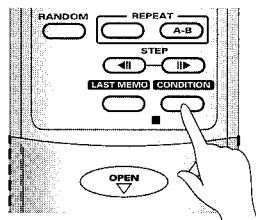

- "CONDITION" will appear on the TV screen.

## Note

- ◆ When there is a power outage or you disconnect the player from the wall outlet while the power is ON, settings are cleared. If you do disconnect the power cord, be sure to turn the display window's "– OFF –" display off with the player's POWER button or the remote control's power button.

## When a disc that has memorized settings is loaded...

"CONDITION" will appear on the screen, and the previously memorized settings will be selected.

## Erasing the recorded contents

Load the disc that has memorized settings, and press the **CLEAR** button during "CONDITION" has been displayed. The disc's recorded data will be erased.

- Settings are stored in memory for use any time.
- You can store settings for up to 30 DVDs in memory. If you memorize settings for more than 30 DVDs, previously memorized settings are erased in order from the least recently memorized settings. After that, if you try to call up these previously memorized settings, you will get the latest settings that have taken their place.
- To make changes to Aspect ratio, Cinema mode/Animation mode, subtitle language, and language settings, press **CONDITION** button during playback.
- Switching of the multi-audio mode etc., is automatic on some discs.







## Selecting Languages (Multi-Language)


Dolby Digital, PCM, and other audio data is recorded on DVDs in a number of languages, letting you choose the desired language.

**1** . Press **AUDIO** during playback.

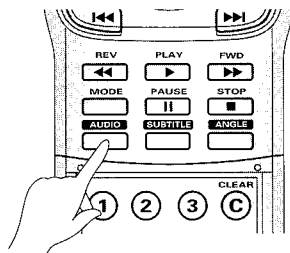
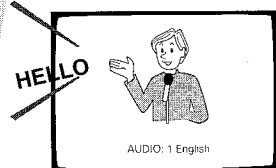


- For some titles, selection can be made using the menu. In this case press the **MENU** button while the indicator is displayed, display the menu screen and make your selection.

### Note


- ◆ Audio recorded with DTS signals will not be output. DTS audio will only be output from the DIGITAL OUT jacks. In this case, please use this unit in combination with a DTS compatible amp or receiver. (Refer to p.48.)
- ◆ You cannot switch languages if there is only one language recorded on the disc.
- ◆ Switching the audio language may not be possible with some titles. In this case, the  mark will be displayed.

**2** . Press **AUDIO** to select the desired language.

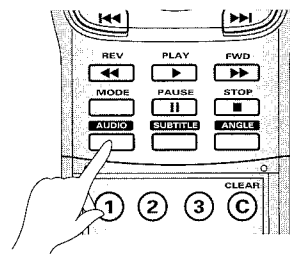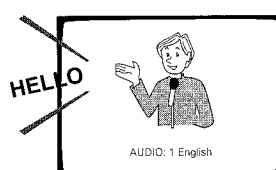

## Changing Audio Type

**1** . Press **AUDIO** during playback.

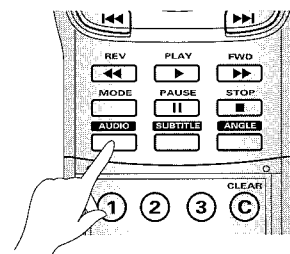

- Audio type changes each time you press the button.

### Tips



- With karaoke and other software, set the appropriate audio type for singing and accompaniment after referring to information on the disc jacket or accompanying material.



## Selecting a Subtitle Language (Multi-Language Subtitles)

You can select a desired subtitle language with DVDs that have subtitle data in multiple languages recorded on them.

1. Press **SUBTITLE** during playback.

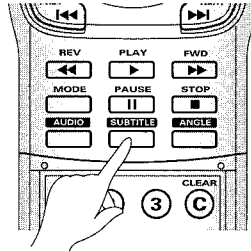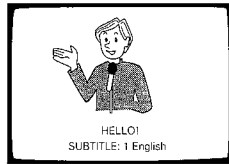




### Note

- ◆ The subtitle language can not be switched if the subtitle language is not recorded, or if only one language is recorded.
- ◆ Switching the subtitle language may not be possible with some titles. In this case, the mark will be displayed.

### Tips

- To clear subtitles during playback, press **CLEAR** button after first pressing **SUBTITLE** button. You can also clear subtitles by selecting OFF in the subtitle menu display.
- Subtitles can be cleared by selecting LAN. SETUP from the INITIAL menu, and setting SUBTITLE to "OFF" (refer to pages 38 and 39).
- For some titles, selection can be made using the menu. In this case press the **MENU** button while the indicator is displayed, display the menu screen and make your selection.

2. Press **SUBTITLE** to select the desired language.

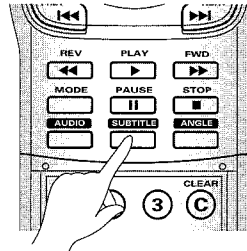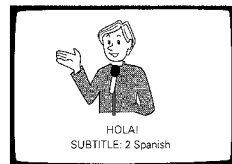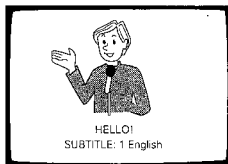






- You can also make your selection from a menu.



## Viewing from a Desired Camera Angle (Multi-Angle)

With DVDs featuring recordings of images shot from different angles, you can choose a desired viewing angle.

1. Press **ANGLE** during playback.

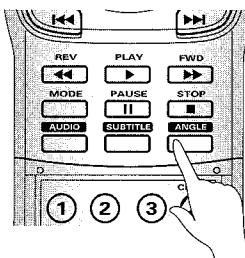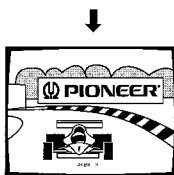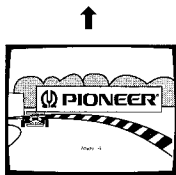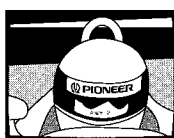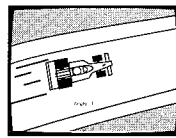

- The camera angle changes each time you press the button.

### To check whether or not the disc is recorded with angles:

The jacket of discs that are recorded with angles will be marked with . Also, on this unit, when locations on discs that are recorded with angles are played back, the mark can be displayed.

### Angle mark don't display setup

1. Press **MENU** during the stop mode.
2. Press the **3** number button.
  - The initial set-up menu will appear.
3. Press the **1** number button.
  - The OSD SETUP screen will appear.
4. Press the **4** number button.
  - The ANGLE menu will appear.
5. Press the **2** number button.
  - Menu setup is finished.



### Tips

- You can use the Multi-Angle function only with discs featuring recordings of images shot from different camera angles.
- During Multi-Angle playback, the Angle indicator on the player lights.
- For some titles, selection can be made using the menu. In this case press the **MENU** button while the indicator is displayed, display the menu screen and make your selection.

# Viewing Disc Information

Press during playback.


Press in the STOP mode.

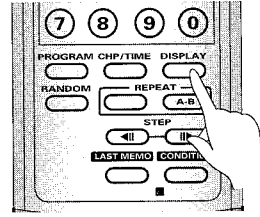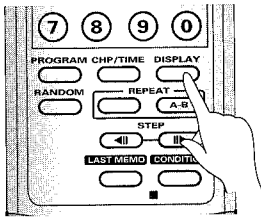


- The display will change as follows each time the button is pressed.  
Some displays may not be displayed depending on the title.

- Disc information is displayed.

## DVD

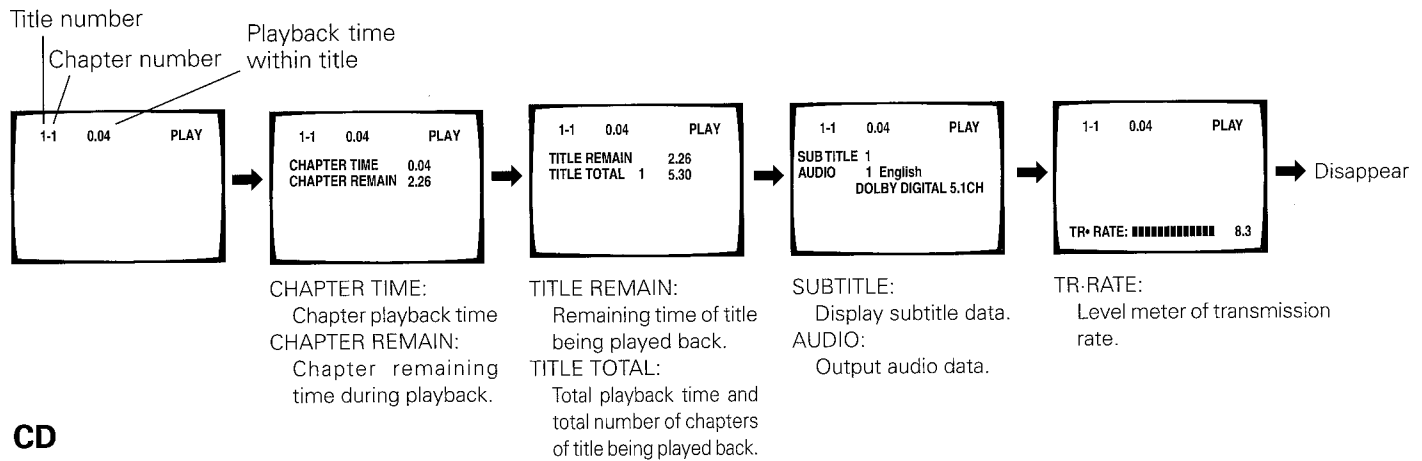


## CD

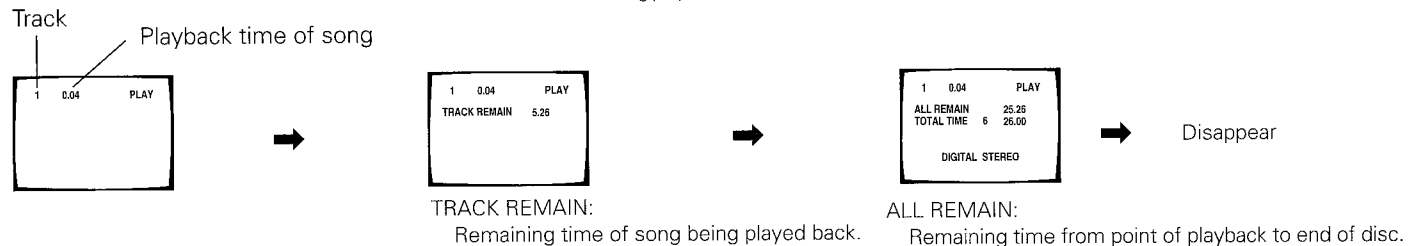


## Video CD

(PBC off)

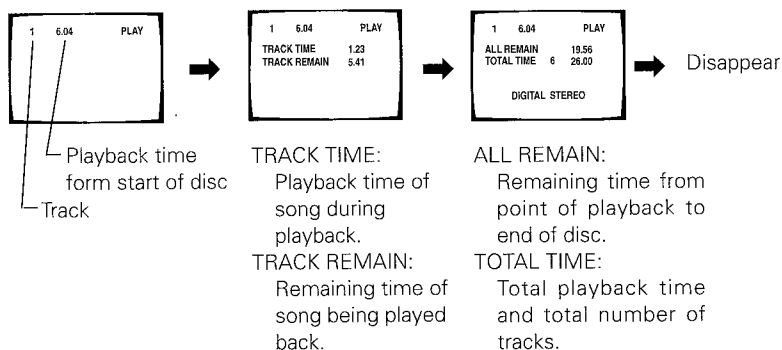

(PBC on)


 




## 5.1 CH Mode Set-Up



Carry out this set-up when you have connected this unit to a receiver that has a 5.1 CH input.

- 1.** While the disc is in the stop mode, press **MENU**.

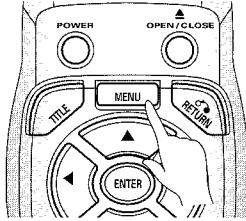
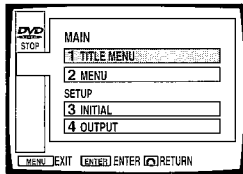


- The main menu will be displayed.



- 6.** Press **MENU**.

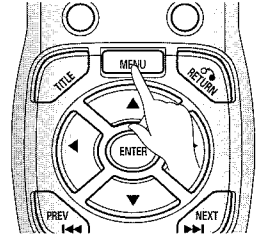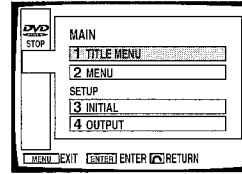



- 2.** Select the output with  .

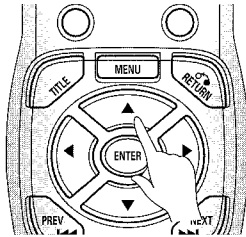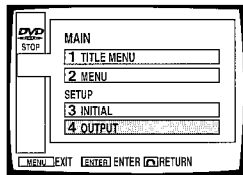

- 7.** Select OUTPUT with  .

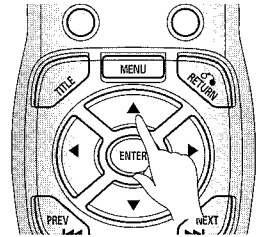
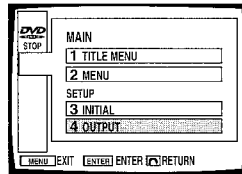


- 3.** Press **ENTER**.

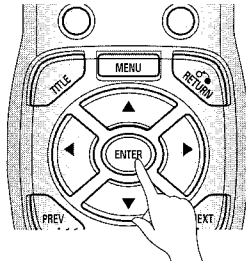
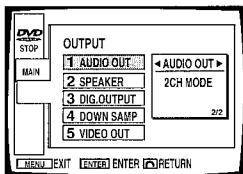


- The AUDIO OUT selection screen will be displayed.



- 8.** Press **ENTER**.

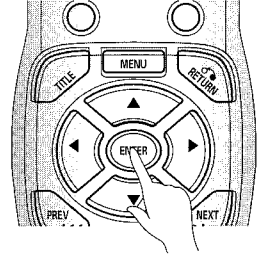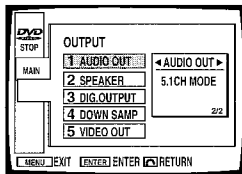

- 4.** Select the 5.1 CH mode with  .

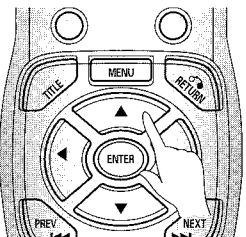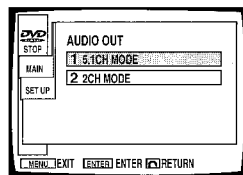


- 9.** Select SPEAKER with  .

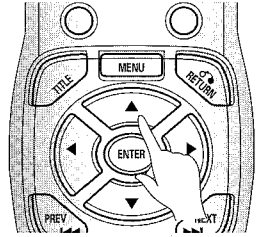
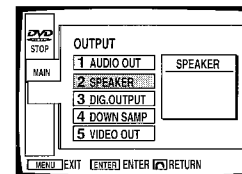


- 5.** Press **ENTER**.

- The 5.1 CH mode will be selected.
- The indicator of the 5.1 CH mode button on the front panel will light at this time.

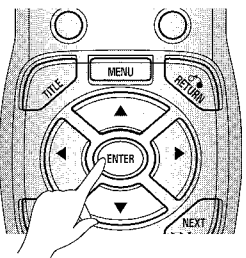



- 10.** Press **ENTER**.

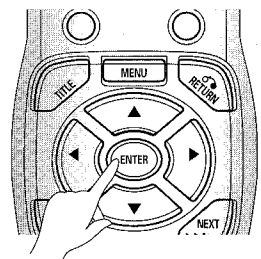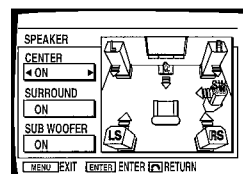

## Selecting a Desired Background Color


You can select a color for menu displays and the screen when the player is not playing.

- 11. Select the speaker (Center, Surround, Sub Woofer) with the buttons, and then select ON or OFF with the buttons.**

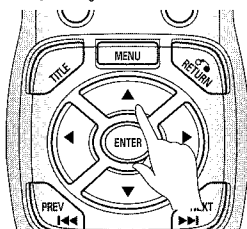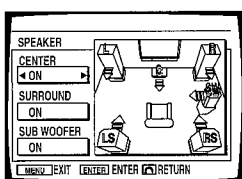

- 12. Press .**


- Speaker set-up is now finished. The 5.1 CH mode can now be used.

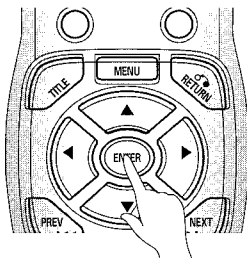

### Note


- ◆ Refer to page 48 for details concerning 5.1 CH audio output.
- ◆ The front panel buttons can also be used for operation. In this case, the set-up indicators will be displayed on the DISPLAY window and the TV screen.
- ◆ When the center and surround settings are OFF, the sub woofer setting will automatically be turned OFF.
- ◆ When the 5.1 CH mode is selected and the DVD's Dolby Digital audio is played back, the 2 CH OUTPUT jacks will be muted.
- ◆ When using the 2 CH output jacks, select the 2 CH mode.
- ◆ Even with discs recorded in DOLBY DIGITAL, if the center or surround components are not recorded on the disc, there will be no output from the CENTER or SURROUND output jacks. (p.52)
- ◆ When the sub woofer is ON, the low range components of the center and surround signals will be mixed in the LFE signal and output from the SUB WOOFER jack.
- ◆ When the sub woofer is OFF, the low range components of the center and surround signals will be mixed in the front L and R channels and output.

5.1ch MODE button

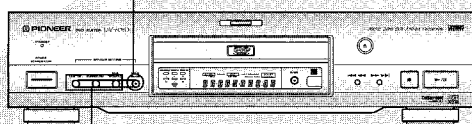


CENTER, SURROUND, SUB WOOFER ON/OFF button



- 1. Press when the player is not playing.**

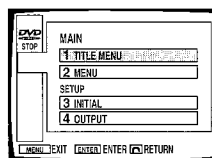




(With a DVD)

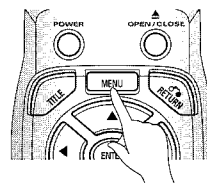


- 2. With the buttons, select "INITIAL" and press .**

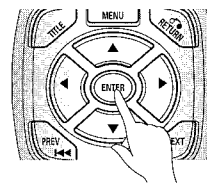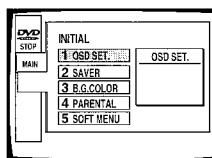

- 3. Select "B.G. COLOR" with the buttons, and press .**

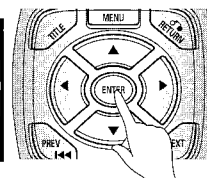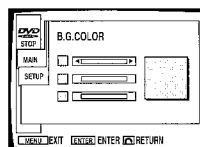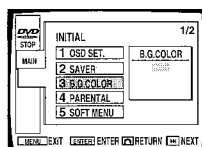


- 4. Select the desired color with the buttons, and adjust the color with the buttons.**

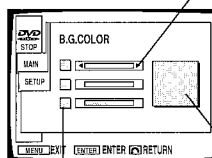


① Select a color with the buttons.

② Adjust color with the buttons.

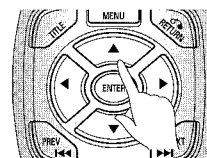


Changes to the selected color.

- 5. Press .**

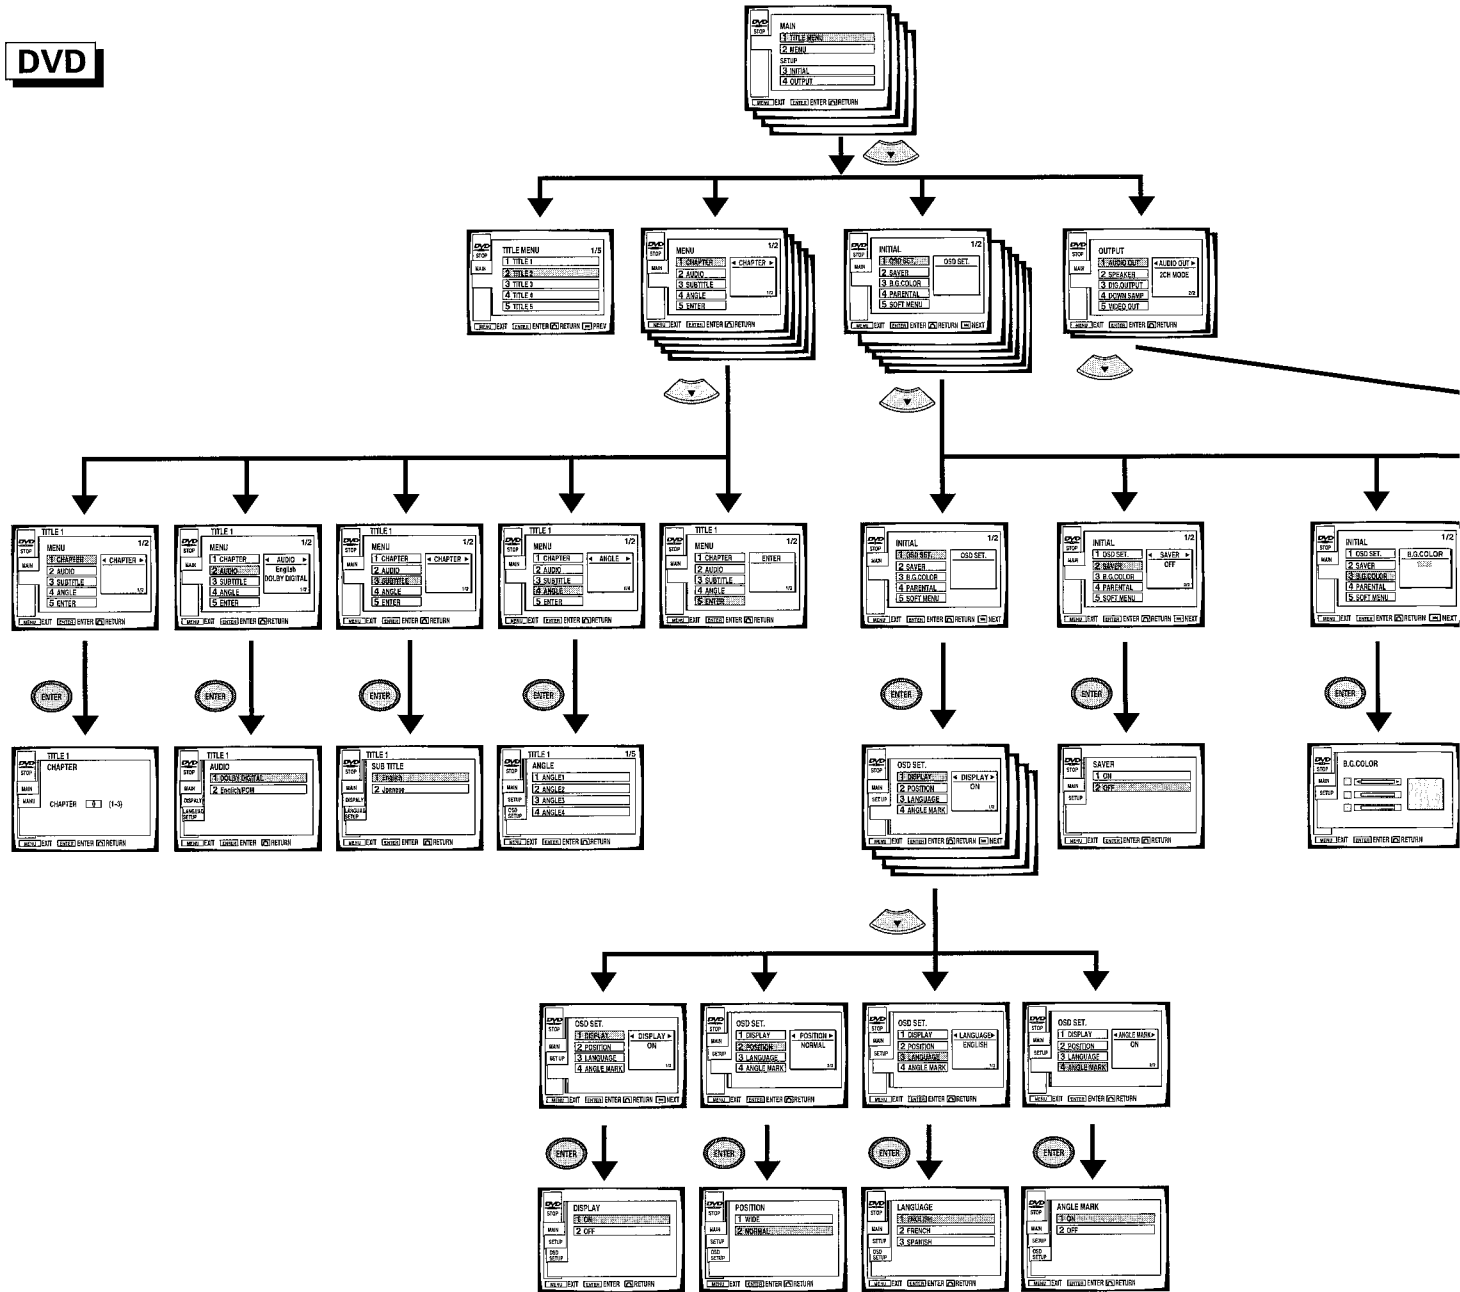


## Outline of GUI (Graphical User Interface) Operation



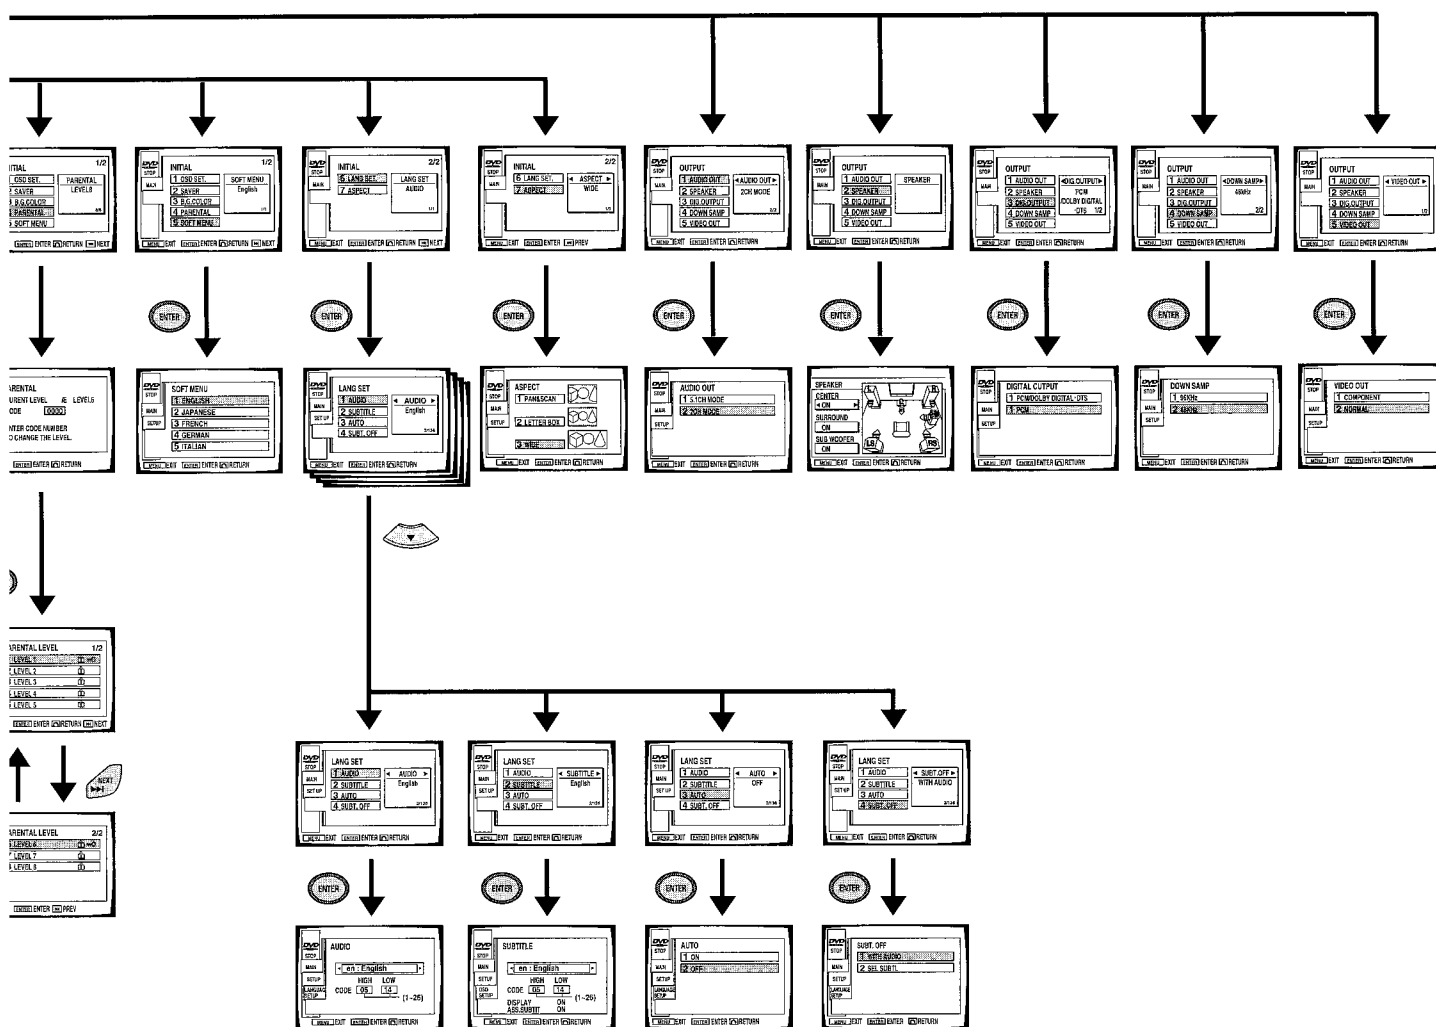

# Outline of GUI (Graphical User Interface) Operation


## CD, Video CD

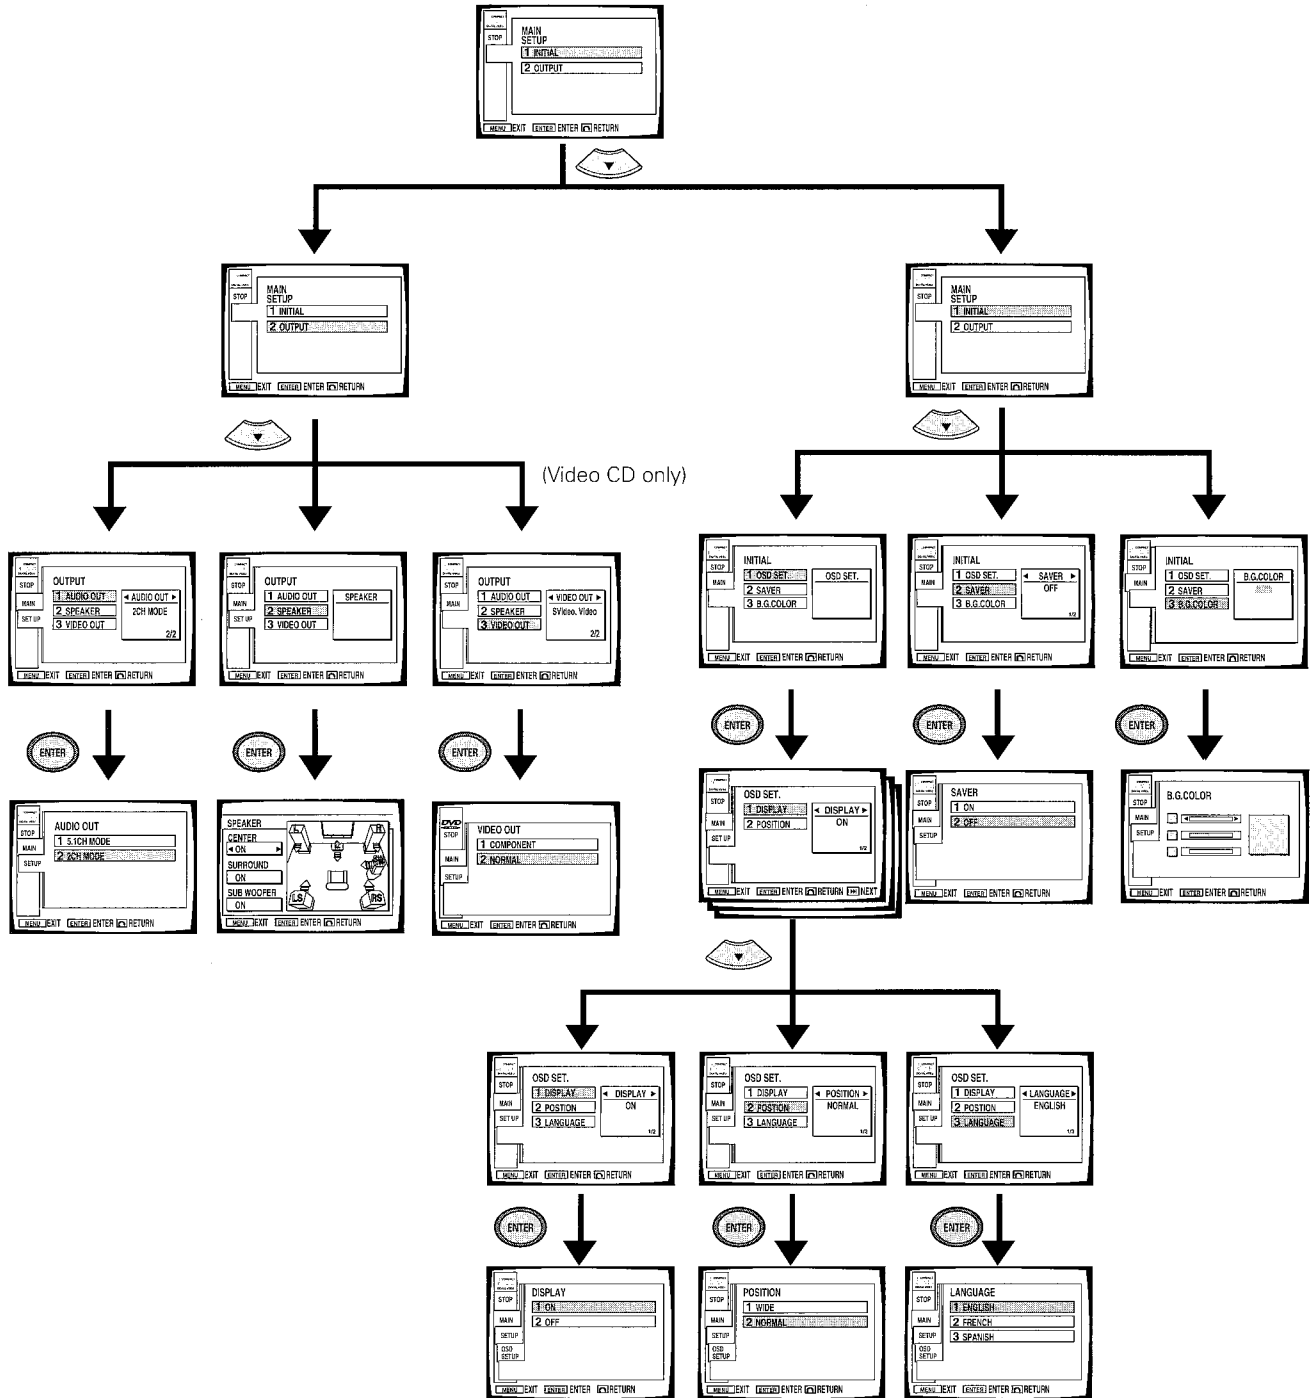




# Button operation within each menu

Button name	Button shape	Operation
MENU button		To leave the menu screen (settings are invalidated)
RETURN button		To return one menu screen back (settings will be memorized) However, search is invalidated.
Number buttons		Selection and conclusion (In the set up menu, some items only operate for selection.)
Direction buttons		Selection
ENTER button		Setting and implementation (playback mode is engaged after title or chapter change)
PREVIOUS button		To go to the previous page
NEXT button		To go to the next page
Direct buttons		To go to menus (setting selected before moving to a new menu will be invalidated)

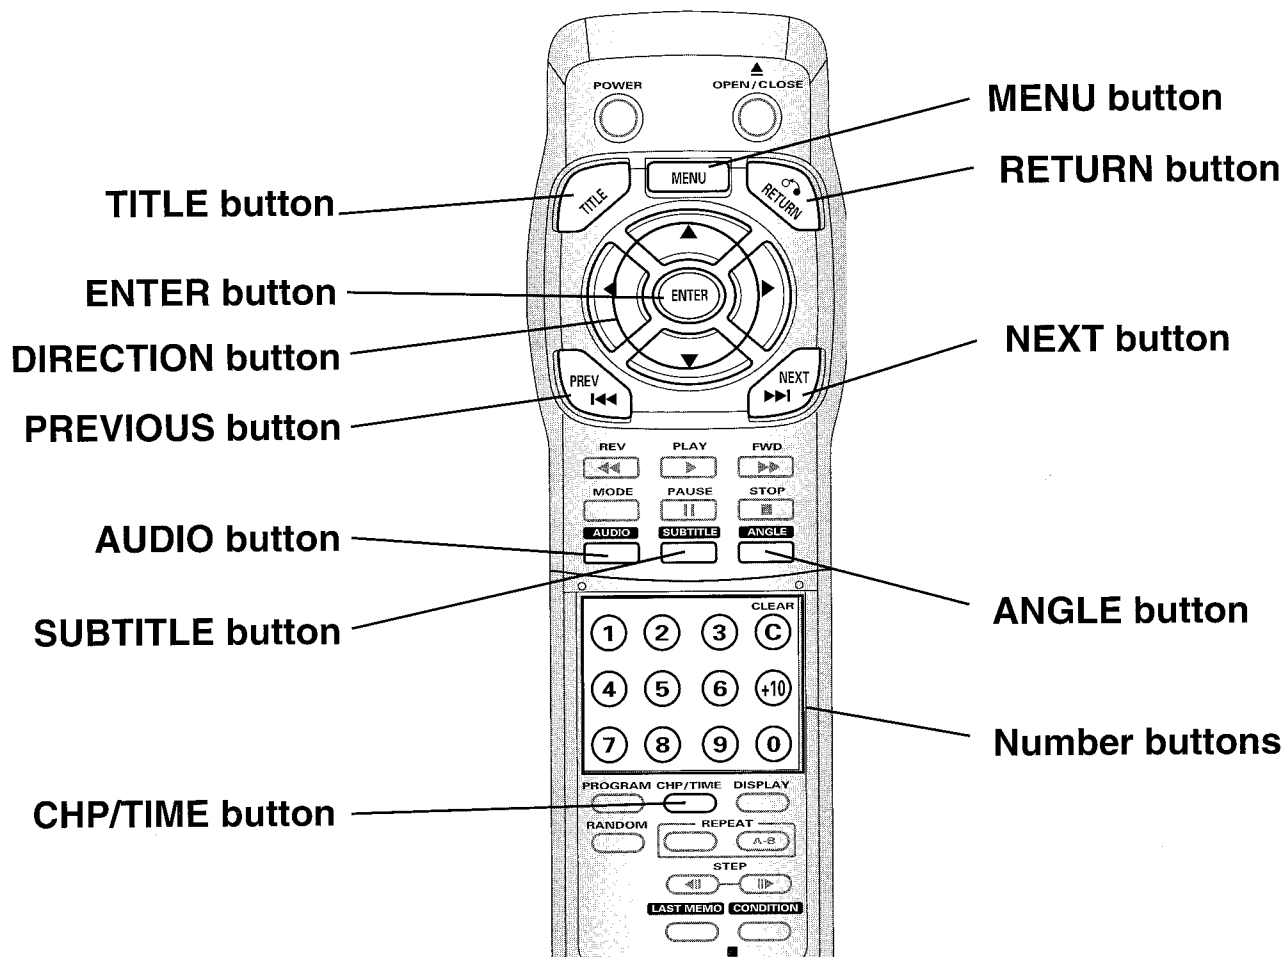

# Example of screen displays and operation

## Ex. 1: Display contents and button functions within the Menu screen

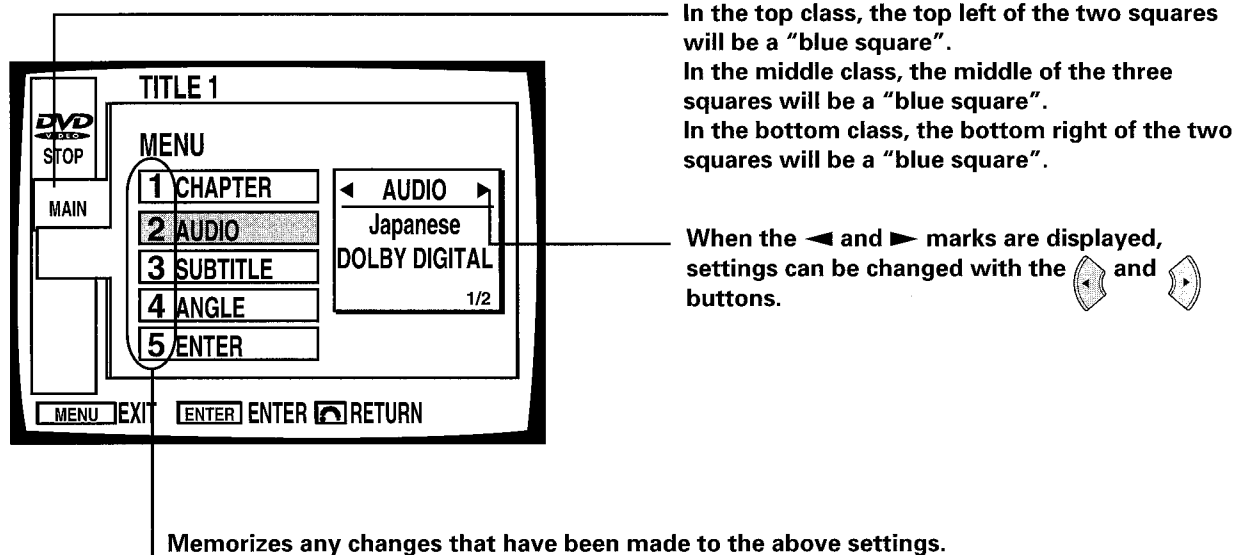


### Item numbers

Selecting an item number by pressing the **number buttons** or using the ◀ ▶ buttons and then pressing the **ENTER button** will display the menu screen for that item number. Selecting item "5 ENTER" however, will memorize the changed settings and quit the mode.

## Ex. 2: Display contents and button functions within the Set-up menu screen


### Current set-up condition

Item numbers are selected with the ◀ ▶ buttons, and settings are changed with the ◀ ▶ buttons.

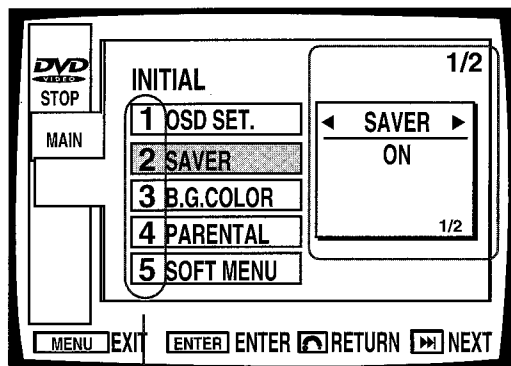

### Current set-up condition

When selection is made with the number buttons or the ◀ ▶ buttons, pressing the ENTER button will display the selection screen selected.

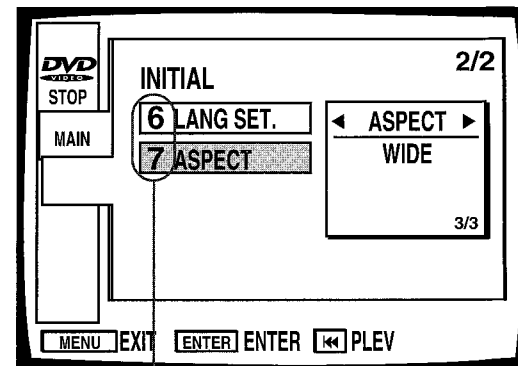


Selecting this will memorize changed settings and quit the mode.

### Selection item numbers

Selection can be made with the number buttons. Selecting "Background color", "Parental level", "Software menu" or "Language setting" will display the selected screen. Also, changing the settings with the ◀ ▶ buttons and pressing the **ENTER button** will memorize the settings and quit the mode.

# About the main menu

The main menu is the menu used for selecting the Title menu screen, Menu screen and Set up screen.

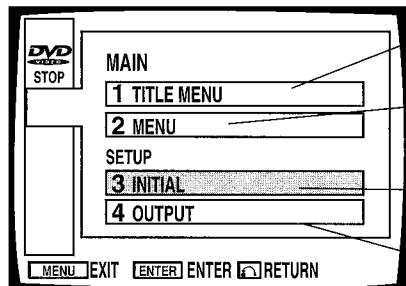

## In the Title menu screen:

Titles can be selected and played back. (Title search)

## In the Menu screen:

Chapters (songs), subtitles, audio and angles within a title can be selected.

## In the Initial setup screen:

The various functions of this player can be set up using the screen displays.


## In the Output setup screen:

Audio to be output from the digital output terminal can be selected.

### Note


- ◆ This menu screen will only be displayed with discs that do not include titles. Also, if the menu is recorded on the disc itself, the disc's menu will be selected when 1. TITLE MENU or 2. MENU is selected.

## About the title menu

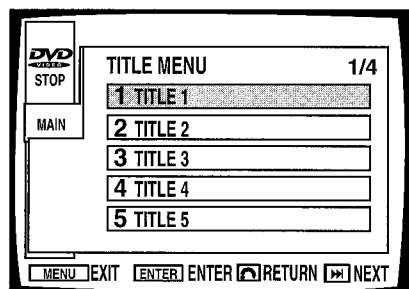

Titles can be selected and played back. This selection screen is the same as the one in "Direct Search with Title Numbers" on page 17.

## Menu screen contents

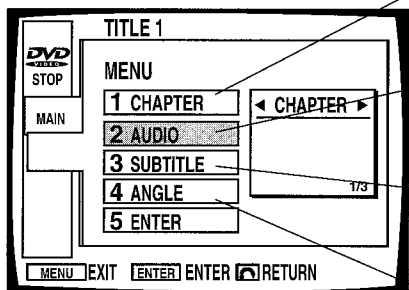

To go to the Chapter screen

### In the Chapter screen:

One chapter (song) within a title can be selected and played back.

To go to the Audio screen

### In the Audio screen:

Audio contents can be selected on discs that include more than one audio language or audio type.

To go to the Subtitle screen

### In the Subtitle screen:

Subtitle contents can be selected on discs that include subtitle information.

To go to the Angle screen


### In the Angle screen:

The scene angle that you want can be selected on discs that include scenes that have been filmed from various angles.

Completes the setting of changes to the above items.


# Changing Settings

## About the initial setup screen

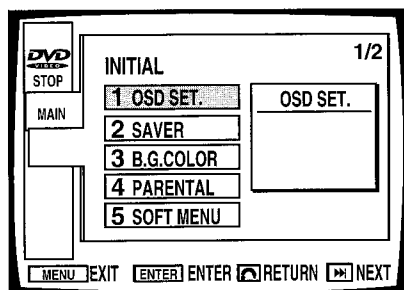



Used when changing various settings. The items and setting details are listed on the next page.
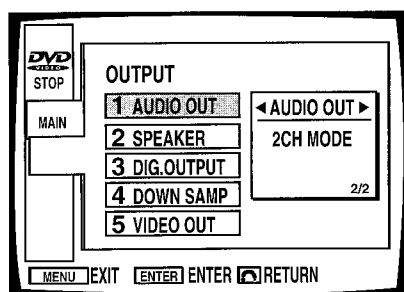
## About the output setup screen



Used when selecting the audio to be output from the output terminal.  
Set according to the amplifier being used.  
Items and setting details are listed in detail on the next page.



## Settings Chart

 Class	Item	Details	Settings status		
			Initial settings (factory settings)		
Initial setting	OSD SET.	<b>DISPLAY</b>	Switches between display of operation indications (Play, Stop etc.) (ON, and no display of indications (OFF).	<b>ON</b> Display of operation indications	<b>OFF</b> No display of operation indications
		<b>POSITION</b>	When watching regular software on a wide TV, operation indications may be displayed outside the area of the screen, so you can't see them. Changing the on-screen location of the indications lets you see them even when watching a wide TV.	<b>NORMAL</b> When using a regular (4: 3) TV.	<b>WIDE</b> When using a wide TV (Not compatible with menu display)
		<b>LANGUAGE</b>	Switches between display of operation and menu indications in English, French or Spanish.	<b>ENGLISH</b>	<b>FRENCH</b> <b>SPANISH</b>
		<b>ANGLE MARK</b>	 is displayed to clearly indicate when the scene playing has various recorded angles.	<b>ON</b>  is indicated.	<b>OFF</b> No indication
	<b>SAVER</b>		Leaving a still image on screen for a prolonged period can result in screen "burn". This player features a screen saver function that prevents screen "burn" due to prolonged display (5 minutes or more) of menus and other indications. It is recommended to leave this function ON.	<b>OFF</b> The screen saver will not operate.	<b>ON</b> The screen saver will operate.
	<b>B.G. COLOR</b>		Lets you select background color for menus and for screen color when no software is playing. You can set R (red), G (green), and B (blue) independently. Setting for each color is possible in 21 steps.	<b>Blue</b>	<b>Switchable</b>
	<b>PARENTAL</b>		This function lets you prevent your children viewing unsuitable material. You can use this handy function if the disc features recorded parental lock coding. With parental lock discs, this function works by skipping violent or other scenes you don't want your children to see. For details, read the disc's instructions. Once the secret number has been set, the restricted viewing level remains the same until the number is reset. Try not to forget the secret number. If you do, you must return to the initial settings. (See page 42.)	<b>Level 8</b>	<b>Switchable between 1~8</b>
	<b>SOFT MENU</b>		This lets you select a desired language for menus on discs that have them in multiple languages.	<b>ENGLISH</b>	<b>Selection possible depend on the disc</b>
	LANG SET.	<b>AUDIO</b>	This lets you select and set the usual language for movies in the same way as for subtitles. Even if you change the language during play, or change discs, the language changes to the one set.	<b>ENGLISH</b>	Select one from 136 languages. (See how to set the language on the next page.)
		<b>SUBTITLE</b>	This lets you select and set the usual language for subtitles. Even if you change the subtitle language during play, or change discs, the subtitle language changes to the one set.	<b>ENGLISH</b>	Select one from 136 languages. (See how to set the language on the next page.)
		<b>AUTO</b>	<b>ON</b> This sets basic language and basic subtitle language to the same language beforehand. When the basic language and basic subtitle language are not identical, if you switch "DISPLAY" OFF and "ASSIST" ON in the subtitle menu, it's the same as switching Auto <b>OFF</b> . With Auto on, the original language and subtitle language are automatically selected. When the language and subtitle language are the same, subtitles are not displayed. Language Selection may not operate in this way with certain discs. ● You can select a language (see page 26) and select a subtitle language (see page 27) part way through a movie. <b>OFF</b> Subtitle and dialog languages are those selected.	<b>ON</b>	<b>OFF</b>
		<b>SUBT.OFF</b>	The subtitle which is displayed by discs can be selected, when the subtitle is set to "OFF". SEL. SUBTL : The selected subtitle language will be selected. WITH AUDIO: The selected audio language will be selected.	<b>SEL. SUBTL</b>	<b>WITH AUDIO</b>


## Changing Settings

Class	Item	Details	Settings status		
			Initial settings (factory settings )		
	ASPECT	When watching wide mode software, this lets you adjust aspect ratio to suit your TV.	WIDE	Pan & Scan	Letterbox
OUTPUT setting	AUDIO OUT	Use when switching Dolby Digital audio. When multi-channel audio such as 5.1 CH audio etc., is input to a receiver that has a 5.1 CH input, set to the 5.1 CH mode. When this unit has been connected to a regular 2 CH input amplifier, receiver or TV, set to the 2 CH mode. Mode switching can be carried out for all discs.	2CH MODE	5.1CH MODE	
	SPEAKER	For selection of speaker used when this unit is connected to a receiver that has a 5.1 CH input.	ON	OFF	
	DIG. OUTPUT	You can switch between audio output from the player's digital OPTICAL jack or the digital coaxial PCM/DIG jack. Dolby Digital (sound system used at cinemas etc.) and Linear PCM (the same digital signal as CDs) are the two standards for DVDs. The DTS signal can also be output through audio switching.	PCM/DOLBY DIGITAL • DTS Automatically selects between Dolby Digital • DTS and linear PCM to match the audio signal. This is when using an amp with a Dolby Digital (AC-3) decoder or with a DTS decoder.	PCM Dolby Digital and linear PCM signals are output in line with the linear PCM standard. This is when using a regular amp or Dolby Pro Logic amp.	
	DOWN SAMPLING	<b>96 kHz:</b> With PCM audio sources that have a sampling frequency of 96 kHz, this assures high sound quality. With audio sources that have a sampling frequency of 48 kHz, play is performed with sampling frequency unchanged at 48 kHz. <b>48 kHz:</b> During play, this compresses sampling frequency of 96 kHz discs to 48 kHz. 48 kHz discs are played as they are at a sampling frequency of 48 kHz. ● You can select the sampling frequency to match that of the audio signal recorded on a disc. Simultaneous switching between Analog output/Digital output is performed to match your selected sampling frequency. ● Some DVD format discs feature copy protect. With this kind of disc, when a sampling frequency of 96kHz is selected, no signal is output from the digital output. If you want to play this type of disc with digital output, select a sampling frequency of 48kHz from the menu.	96 kHz	48 kHz	
	VIDEO OUT	This lets you select between component output and regular output of video signals. <b>If you select component output, the signal from the video output jack becomes black and white.</b>	(S) video output	Component output	



To return to the initial settings if they have been changed since you purchased the player, perform the following procedures.

If power to the player is ON, switch it OFF. While power is OFF, press the  button while pressing the  button.


# How to Set Basic Audio and Subtitles

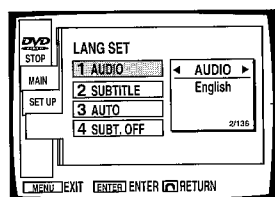

Changes in order when the remote control's or button is pressed.

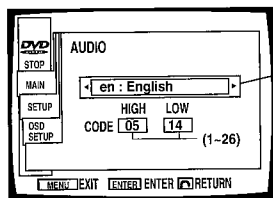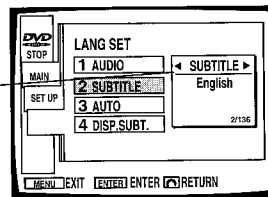

Referring to the input codes (high order, low order) on the following language code list, use the remote control's number buttons (For selection of numbers above 10, use the +10 button) to select the number that corresponds to the language that you want to select.

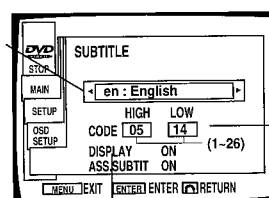

After selecting this display with the remote control's or button, display ON and display OFF can be selected with the remote control's or button.

- When the auto setting is ON (page 40), because auto setting is given priority, the English audio and subtitles may differ from the language set for the basic audio and basic subtitles.

Some discs provide subtitles offering explanations of scenes for the hard of hearing. Switching "ASS. SUBTIT" ON assures these subtitles are displayed from the beginning.

## Language code list

Language	Language-code	Input-code (high-order)	Input-code (low-order)
Japanese	ja	10	01
English	en	05	14
French	fr	06	18
German	de	04	05
Italian	it	09	20
Spanish	es	05	19
Dutch	nl	14	12
Russian	ru	18	21
Chinese	zh	26	08
Korean	ko	11	15
Greek	el	05	12
Afar	aa	01	01
Abkhazian	ab	01	02
Afrikaans	af	01	06
Amharic	am	01	13
Arabic	ar	01	18
Assamese	as	01	19
Aymara	ay	01	25
Azerbaijani	az	01	26
Bashkir	ba	02	01
Belorussian	be	02	05
Bulgarian	bg	02	07
Bihari	bh	02	08
Bislama	bi	02	09
Bengali, Bangla	bn	02	14
Tibetan	bo	02	15

Language	Language-code	Input-code (high-order)	Input-code (low-order)
Breton	br	02	18
Catalan	ca	03	01
Corsican	co	03	15
Czech	cs	03	19
Welsh	cy	03	25
Danish	da	04	01
Bhutani	dz	04	26
Esperanto	eo	05	15
Estonian	et	05	20
Basque	eu	05	21
Persian	fa	06	01
Finnish	fi	06	09
Fiji	fj	06	10
Faroese	fo	06	15
Frisian	fy	06	25
Irish	ga	07	01
Scottish Gaelic	gd	07	04
Galician	gl	07	12
Guarani	gn	07	14
Gujarati	gu	07	21
Hausa	ha	08	01
Hindi	hi	08	09
Croatian	hr	08	18
Hungarian	hu	08	21
Armenian	hy	08	25
Interlingua	ia	09	01



## How to Set Basic Audio and Subtitles

Language	Language-code	Input-code (high-order)	Input-code (low-order)
Interlingue	ie	09	05
Inupiak	ik	09	11
Indonesian	in	09	14
Icelandic	is	09	19
Hebrew	iw	09	23
Yiddish	ji	10	09
Javanese	jw	10	23
Georgian	ka	11	01
Kazakh	kk	11	11
Greenlandic	kl	11	12
Cambodian	km	11	13
Kannada	kn	11	14
Kashmiri	ks	11	19
Kurdish	ku	11	21
Kirghiz	ky	11	25
Latin	la	12	01
Lingala	ln	12	14
Laotian	lo	12	05
Lithuanian	lt	12	20
Latvian, Lettish	lv	12	22
Malagasy	mg	13	07
Maori	mi	13	09
Macedonian	mk	13	11
Malayalam	ml	13	12
Mongolian	mn	13	14
Moldavian	mo	13	15
Marathi	mr	13	18
Malay	ms	13	19
Maltese	mt	13	20
Burmese	my	13	25
Nauru	na	14	01
Nepali	ne	14	05
Norwegian	no	14	15
Occitan	oc	15	03
(Afan) Oromo	om	15	13
Oriya	or	15	18
Panjabi	pa	16	01
Polish	pl	16	12
Pashto, Pushto	ps	16	19
Portuguese	pt	16	20
Quechua	qu	17	21
Rhaeto-Romance	rm	18	13
Kirundi	rn	18	14

Language	Language-code	Input-code (high-order)	Input-code (low-order)
Rumanian	ro	18	15
Kinyarwanda	rw	18	23
Sanskrit	sa	19	01
Sindhi	sd	19	04
Sango	sg	19	07
Serbo-Croatian	sh	19	08
Singhalese	si	19	09
Slovak	sk	19	11
Slovenian	sl	19	12
Samoan	sm	19	13
Shona	sn	19	14
Somali	so	19	15
Albanian	sq	19	17
Serbian	sr	19	18
Siswati	ss	19	19
Sesotho	st	19	20
Sundanese	su	19	21
Swedish	sv	19	22
Swahili	sw	19	23
Tamil	ta	20	01
Telugu	te	20	05
Tajik	tg	20	07
Thai	th	20	08
Tigrinya	ti	20	09
Turkmen	tk	20	11
Tagalog	tl	20	12
Setswana	tn	20	14
Tongan	to	20	15
Turkish	tr	20	18
Tsonga	ts	20	19
Tatar	tt	20	20
Twi	tw	20	23
Ukrainian	uk	21	11
Urdu	ur	21	18
Uzbek	uz	21	26
Vietnamese	vi	22	09
Volapük	vo	22	15
Wolof	wo	23	15
Xhosa	xh	24	08
Yoruba	yo	25	15
Zulu	zu	26	21

# Set-Up

## Connecting the Player

### Connection example 1.

- ① To a TV with Video input
- ② TV featuring color signal inputs ..... 46

### Connection example 2.

- AV receiver with digital input for Dolby Digital (AC-3) ..... 47

### Connection example 3.

- DTS compatible amp/receiver ..... 47

### Connection example 4.

- To a receiver with 5.1 CH input ..... 48

### Connection example 5. AV amp ..... 49

### Connection example 6.

- Digital recording components ..... 49

## Names and Functions

Remote control ..... 50

Front panel ..... 51

Rear panel ..... 51

Display window ..... 52

# Other Information

Troubleshooting ..... 53

For Proper and Long Use ..... 54

Terms ..... 56

Specifications ..... 58

# Connecting the Player


## Precautions when connecting the player

This player's Analog copy protect technology is copy guarded. If you connect the player to a TV via a VCR, or record and playback the contents of a disc with a VCR, the playback picture may not be normal.

Select one of the following ways to connect the player to your TV.

### Connection example 1.

- ① To a TV with video input
- ② TV featuring color signal inputs

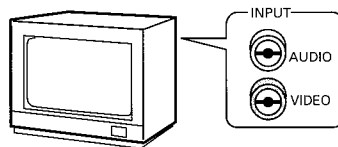

If your TV has a video input, and it is available for use, this is the easiest way to hook up the player.

 
Also, a better quality picture will be possible when a TV that has a component input is used.

Video out




- Connect plugs to the terminals that match the plug's color (white, red, yellow).


Audio out



S-Video out

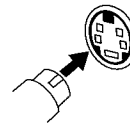

- Connect the TV with S-VIDEO terminal to the S VIDEO OUT terminal of this player.

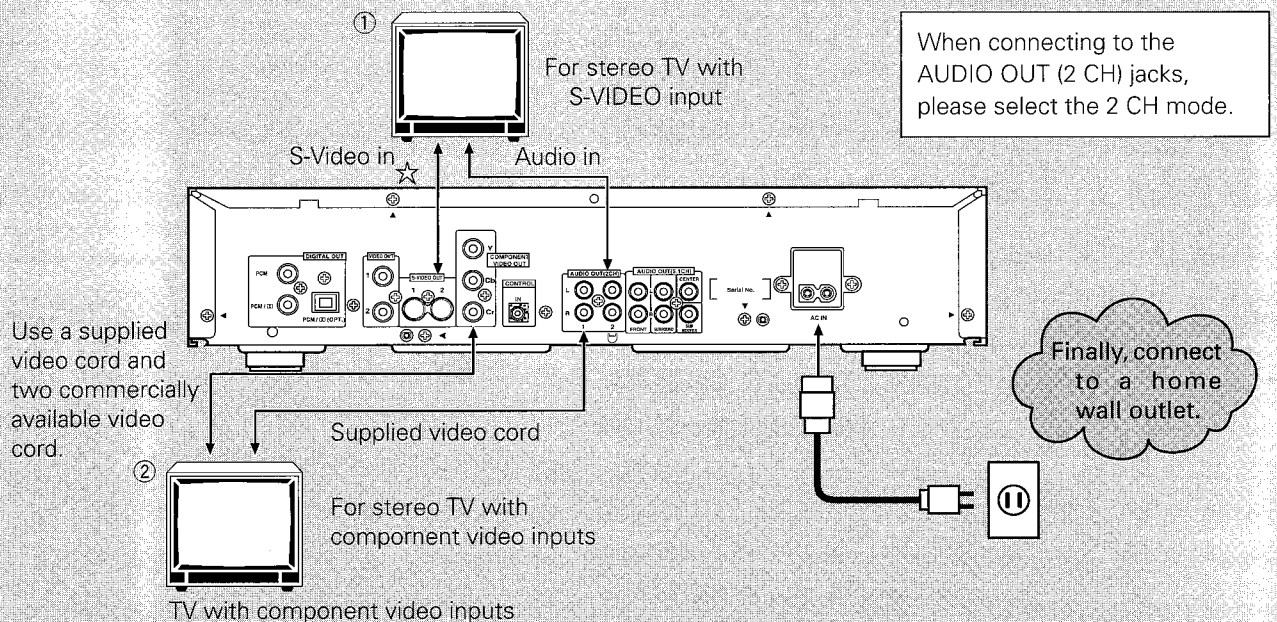

- Please also refer to the manual for the TV (monitor TV or VCR) that you are making connection to.

- You can use the player with a TV featuring color signal inputs for video input. This assures high picture quality.
- The names given to the color signal inputs differ depending on the TV.
- When image color is thin or different, make adjustments on the TV side.

### Note

- ☆ Indicates the use of separately sold cords.
- ☆ Cables can be found at your local audio/video dealer.

## Connection example 2.


### AV receiver with digital input for Dolby Digital (AC-3).



When connecting the player to an amp with Dolby Digital (AC-3) inputs.

\*Make this connection when using this unit with Pioneer's VSX-07TX, VSX-09TX AV receiver.

- Connect this unit's digital output PCM/ jack to the Dolby Digital (AC-3) input jack of a Dolby Digital compatible amplifier. In this case, set the output mode to the 2 CH mode. If set to the 5.1 CH mode, digital signals will not be output.
- Select whether or not to use the coaxial digital output according to the amplifier's input jack.

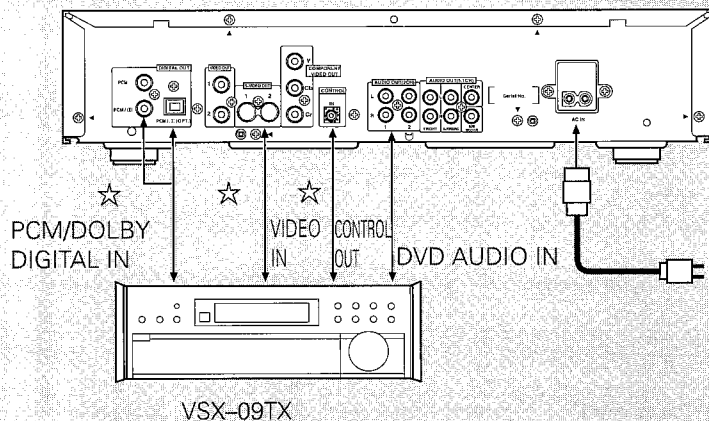

Finally, connect to a home wall outlet.

For Dolby Digital output from the DIGITAL OUT jacks, select the 2 CH mode.

- The digital output setting is set to 96KHz. Digital output is prohibited for some discs.

#### Note

☆ Cables can be found at your local audio/video dealer.

 
Please set the amplifier's function as follows when playing back a disc on this unit.

DVD playback: DVD

Other discs that can be played back such as a CD etc.: CD

## Connection example 3.


### DTS compatible amp/ receiver



When connecting the player to a DTS compatible amp or receiver.

When playing back a disc recorded with the DTS signal, use a DTS compatible amp or receiver and be sure to use the DIGITAL OUT "PCM/ " jack.

\* Switch the DIGITAL OUT setting to DOLBY DIGITAL • DTS.

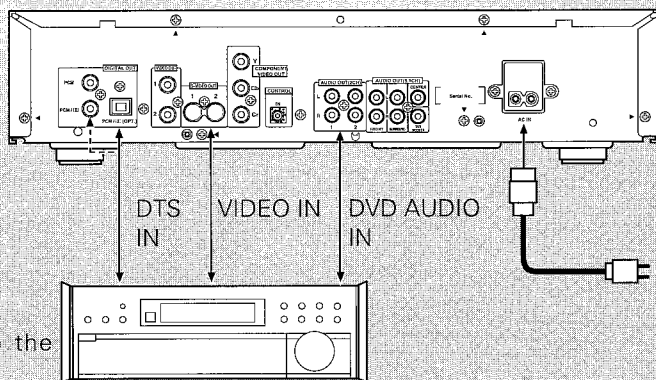

Finally, connect to a home wall outlet.


DTS compatible amp/receiver  
For details, please refer to the amplifier's instruction manual.

#### Note

 - ◆ During playback of a DTS DVD disc, signals will not be output from the AUDIO OUT jacks.
- ◆ Do not use the AUDIO OUT jacks for playback of DTS audio discs other than DVDs as noise will be generated.


## Connection example 4.

### To a receiver with 5.1 CH input



For connecting this unit to a receiver that has a 5.1 CH input.

- Carry out the following set-up when combining this unit with a PIONEER receiver that has a 5.1 CH input (VSX-11, VSX-D457 or VSX-D407).

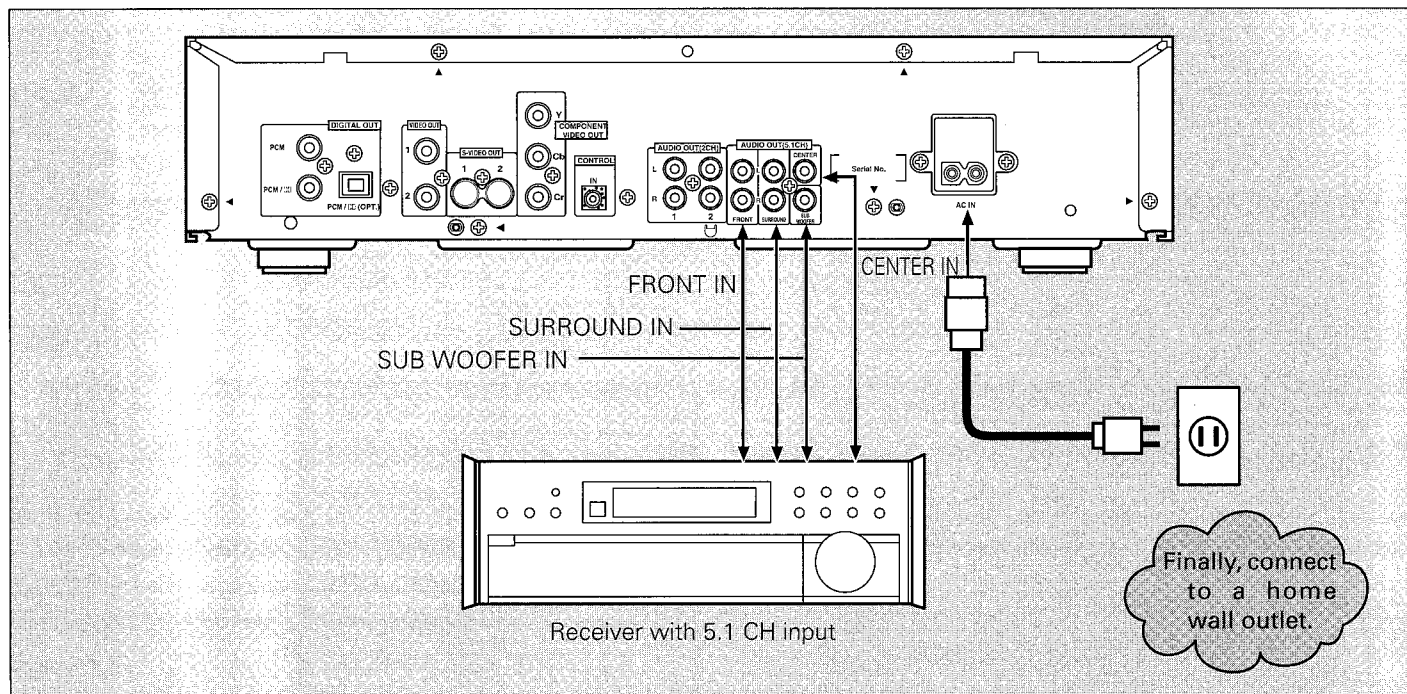

## About source audio output

When the mode has been switched between the 5.1 CH and 2 CH mode settings using the MENU screen or this unit's 5.1 CH button, audio output for each source will be as shown on the following list.

AUDIO CONTENTS		OUTPUT MODE	AUDIO OUT (2CH)		AUDIO OUT (5.1 CH)				DIGITAL OUTPUT	
			L, R		Front L, R	Center	Surround L, R	Sub Woofer	PCM	PCM/
DVD	Dolby Digital	5.1ch MODE	MUTE		*Front Lch, Rch	*Center	*Surround Lch, Rch	*Sub Woofer	MUTE	MUTE
		2ch MODE	2CH DOWNMIX Lt, Rt		2CH DOWNMIX Lt, Rt	MUTE	MUTE	MUTE	linear PCM Lt, Rt	Dolby Digital /linear PCM Lt, Rt
	Dolby Digital karaoke	5.1ch/2ch MODE	2CH DOWNMIX Lo, Ro		2CH DOWNMIX Lo, Ro	MUTE	MUTE	MUTE	linear PCM Lo, Ro	Dolby Digital /linear PCM Lo, Ro
	LPCM	5.1ch/2ch MODE	0ch, 1ch		0ch, 1ch	MUTE	MUTE	MUTE	linear PCM 0ch, 1ch	linear PCM 0ch, 1ch
	DTS	5.1ch/2ch MODE	MUTE		MUTE	MUTE	MUTE	MUTE	MUTE	DTS /MUTE
	VCD	5.1ch/2ch MODE	Lch, Rch		Lch, Rch	MUTE	MUTE	MUTE	linear PCM Lch, Rch	linear PCM Lch, Rch
	CD	5.1ch/2ch MODE	Lch, Rch		Lch, Rch	MUTE	MUTE	MUTE	linear PCM Lch, Rch	linear PCM Lch, Rch
	DTS audio disc other than DVD	5.1ch/2ch MODE	Noise occurs.		Noise occurs.	MUTE	MUTE	MUTE	DTS	DTS

#### 2CH DOWNMIX:

Divides the Dolby Digital Surround audio signal among the front 2 CH signals.

Lt, Rt: 2 CH compatible with Dolby Pro Logic  
Lo, Ro: 2 CH not compatible with Dolby Pro Logic  
Linear PCM: Digital stereo audio.


\* Contents of output will change according to the speaker setting.

#### Note

- For discs other than Dolby Digital DVD discs, output will not change even if the output mode is set to the 5.1 CH mode or the 2 CH mode.


## Connection example 5.

### AV amp

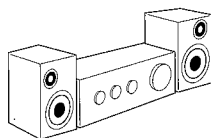

By connecting to a regular AV amp or stereo amp, you can enjoy playback with improved sound quality.

- Connect this player's audio output jacks to an amp's CD, LD, AUX or other audio input jacks. (Do not connect to PHONO jacks.)
- Connect this player's video output jack to the amp's video input jack.

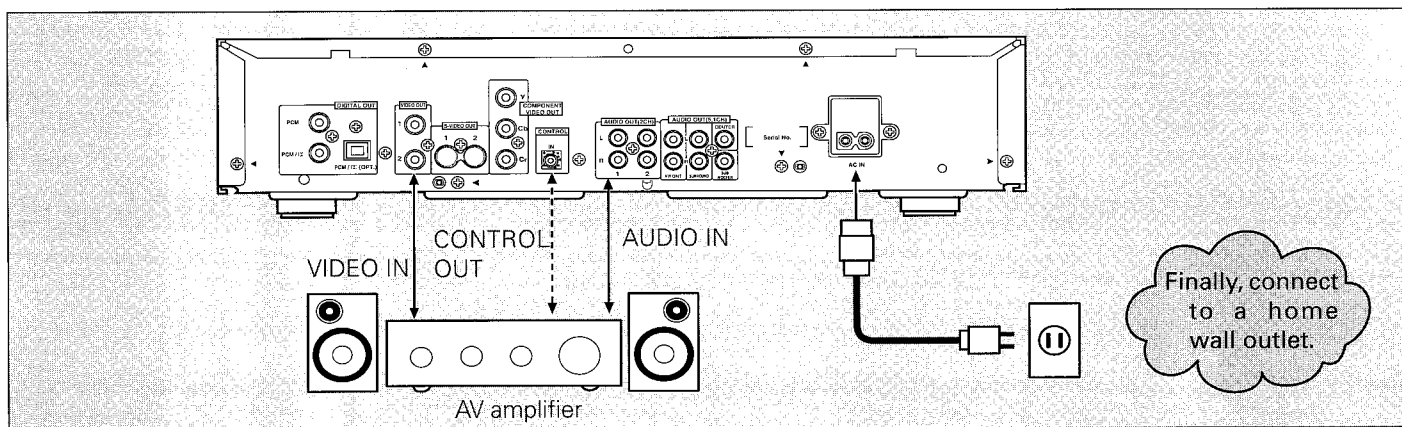


### Note

☆ Cables can be found at your local audio/video dealer.

- When connecting to a component bearing the Pioneer **SR** mark:  
If you use a commercially available cord with a mini plug (no resistance) to connect this player's CONTROL IN jack to the control output jack of another component bearing the **SR** mark, you can control the player as though it were a component in a system (system control).
- If you connect for system control, you cannot operate the player directly by pointing the remote control at it and pressing buttons.
- When controlling as a system, be sure to make connection to the amplifier using an audio cord, even when using only digital components.
- Surround sound can be enjoyed with amplifiers that have a built-in Dolby Pro Logic decoder.
- For more details, refer to the connected component's operation manual.

## Connection example 6.


### Digital recording components

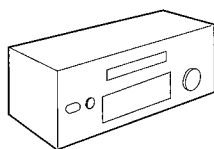

Digital recording components such as an MD, CD-R or DAT can be connected.

Make digital output "PCM" (Coaxial) connection.

- Set to the PCM setting when using the "PCM/ **□□** " DIGITAL OUT jack.
- For optical digital connection, connect the optical digital input jack to the output jack.
- For coaxial digital connection, connect the digital input jack to the output jack.

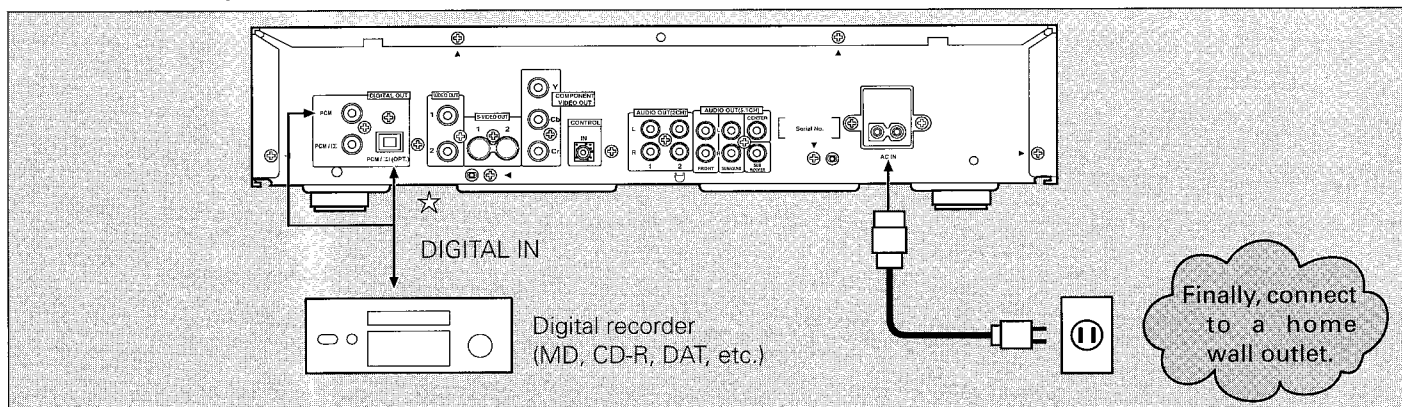

### Note


When recording a Dolby digital compatible DVD, set "Digital output (PCM/ **□□** )" to the PCM setting as explained on page 42. When the DVD is recorded in Dolby Digital (AC-3), noise will be

recorded if the setting is left at PCM/DOLBY DIGITAL.  
☆ Cables can be found at your local audio/video dealer.  
◆ Please playback in the 2 CH mode.



# Names and Functions


## ■ Remote control

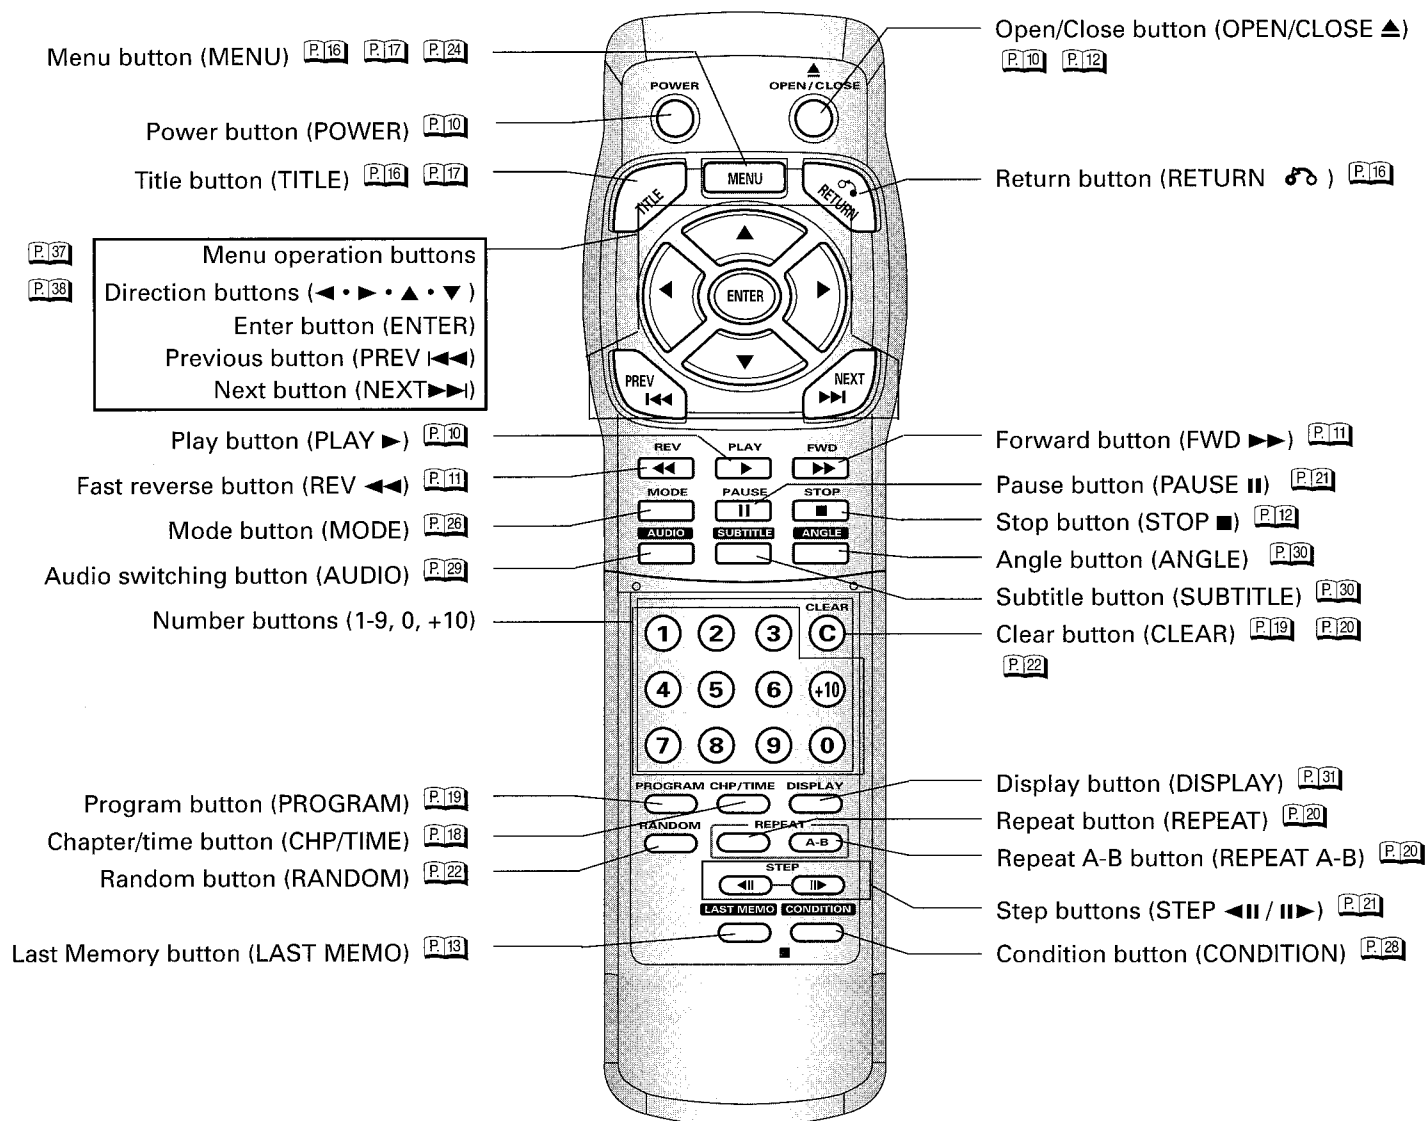

### Remote control operation

When operating the remote control, point it at the remote sensor located on the player's front panel. The remote control can be used up to 23 feet (7 m) from the player and within a 30° angle each side of the sensor.


- Exposing the remote sensor to direct sunlight or strong light may cause faulty operation.
- If the CONTROL IN jack on the player's rear panel is connected to another component, point the remote control at that component for operation. Operation is not possible when pointed at this player (page 49).

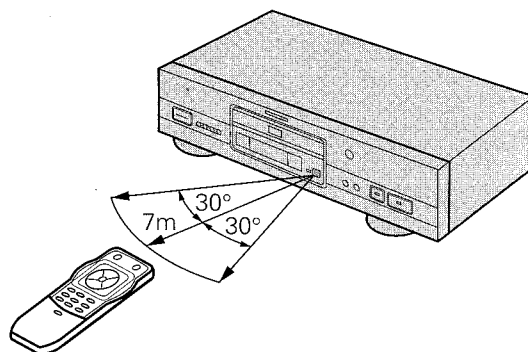



## Names and Functions

### Front panel

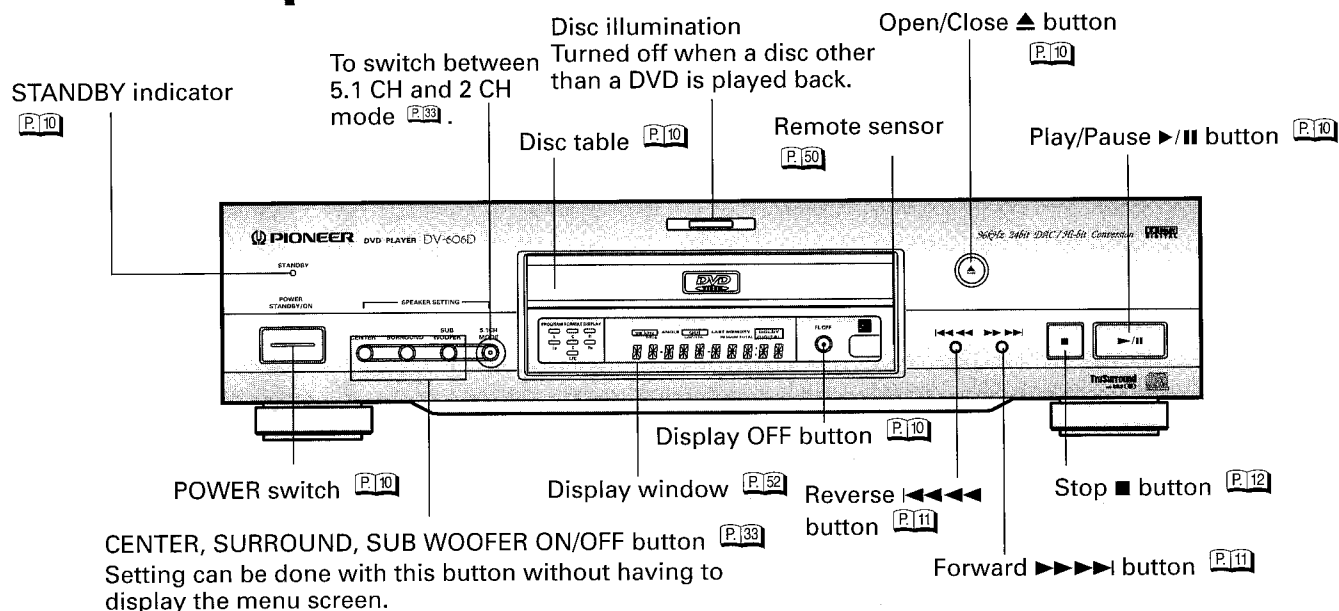


### Rear panel

#### Digital output jack (Coaxial)


This is used for output of the digital audio signal recorded on CDs and Video CDs. Depending on the components you connect this digital output to, noise may be generated.

When connecting to an Dolby Digital (AC-3) compatible component, use the PCM/ jack. (Refer to the chart on the right.)

Your amp	Regular AV amp	Coaxial	Connect to the coaxial jack, and select PCM from the menu.
		Optical	Connect to the optical jack, and select PCM from the menu.
	Dolby Digital (AC-3) compatible amp DTS Compatible amp	Coaxial	Connect to the PCM/  jack, and select PCM/DOLBY DIGITAL • DTS from the menu.
		Optical	Connect to the optical jack, and select PCM/DOLBY DIGITAL • DTS from the menu.

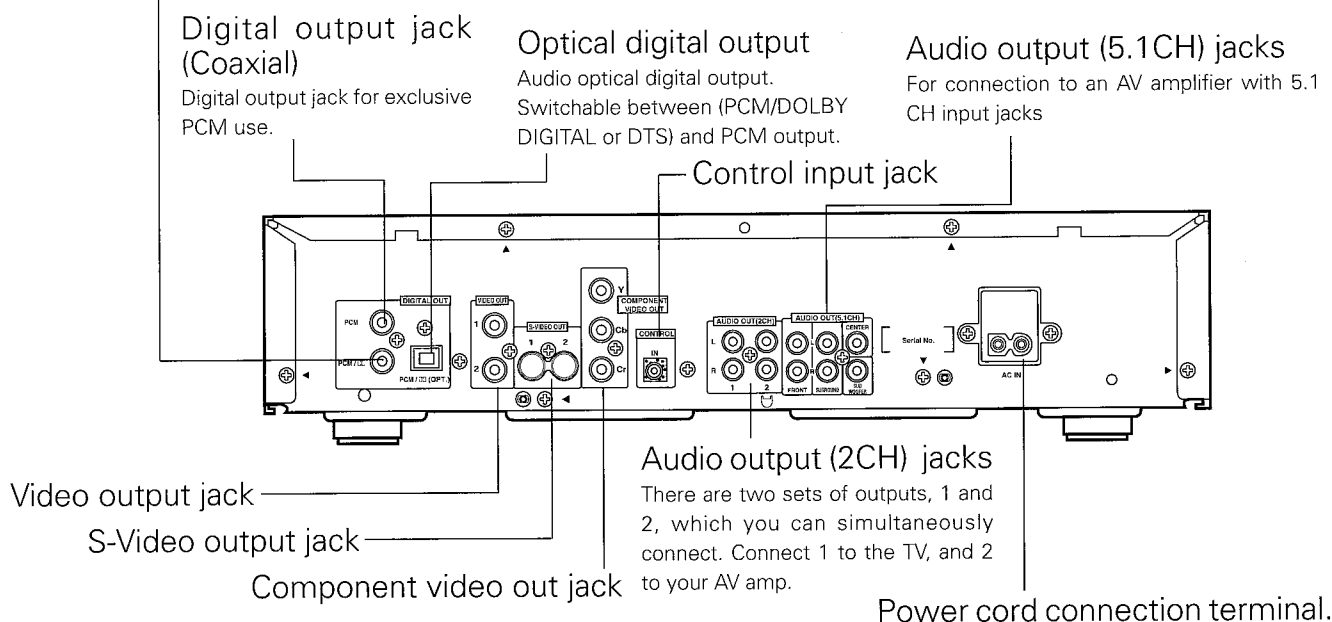

# ■ Display window

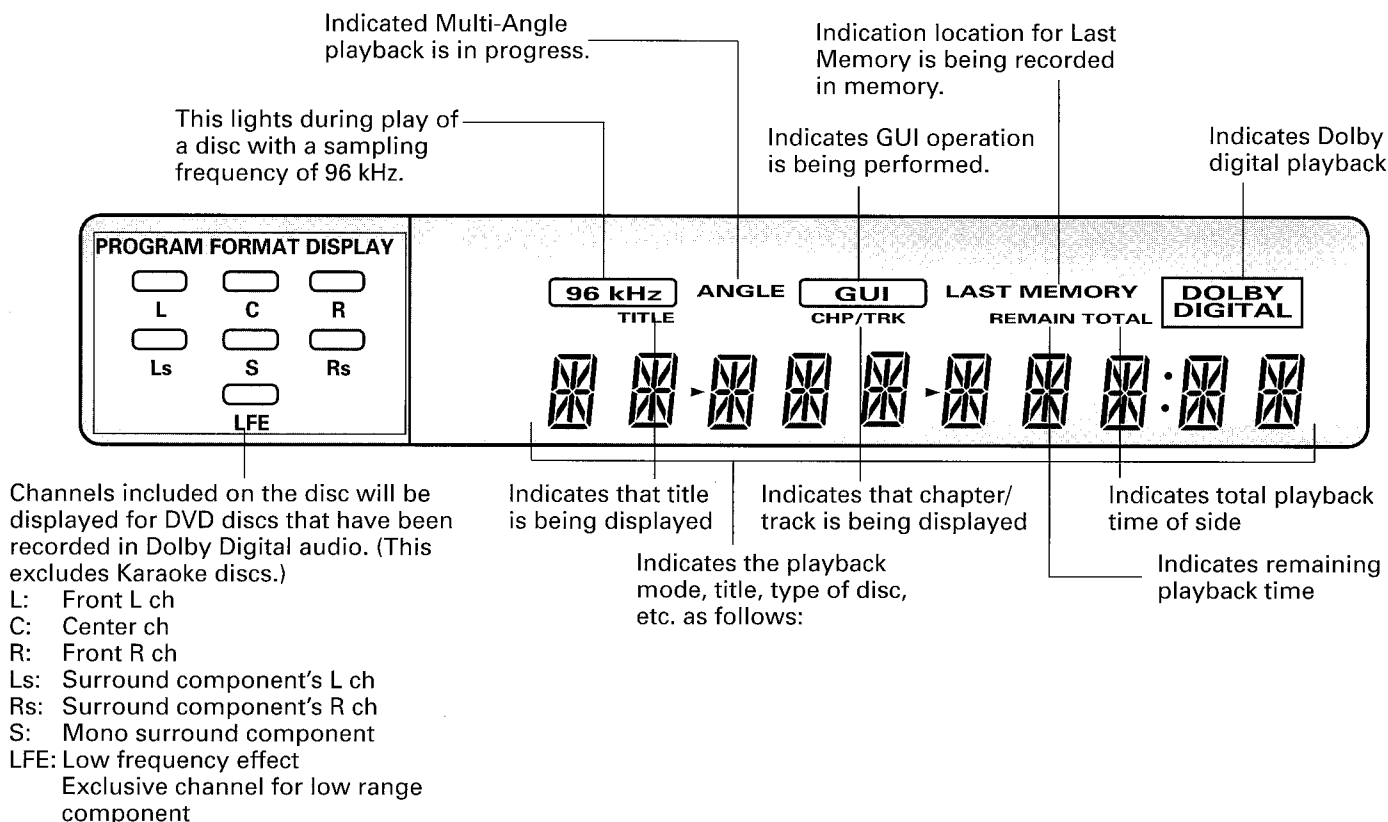

The L, R, and S indicators will light when the audio is Dolby Surround.

CD	:Compact disc	PLAY	:Playback
DVD	:DVD	STOP	:Stop
VCD	:Video CD	PAUSE	:Pause
PBC PLAY	:Playback control playback on Video CD	NO DISC	:No disc
OPEN	:Disc table is opening or is open	-- OFF --	:Power is turned off
CLOSE	:Disc table is closing	MENU	:Menu mode
RDM	:Random playback	TITLE	:Title menu
PROGRAM	:Program mode	SETUP	:Set-up menu
R_TRK	:Repeat mode	COND_MMEMO	:Condition memory
R_A	:Start point of 2 point repeat playback	LAST_MMEMO	:Last memory
R_AB	:2 point repeat playback	CENTER	:Center speaker
R_TTL	:Repeat playback of the title	SURR.	:Surround speaker
R_CHP	:Repeat playback of the chapter	SUB WF	:Sub woofer
REPEAT SID	:When side repeat is selected	5.1CH MODE	:5.1ch mode
REPEAT PGM	:When program repeat is selected	2CH MODE	:2ch mode

# Troubleshooting

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Inspect the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

	Symptom	Possible causes	Reference page
Operation	1.The disc comes back out even when the disc table is closed.	● The disc is dirty or warped.	p.52
	2.Playback is not possible.	● The disc is not placed properly on the disc table.	p.10
	3.Picture disturbance during playback.	● Region No. does not conform with this unit.	p.10
	4.When recorded on a VCR there is disturbance in the playback picture.	● Condensation has formed inside the player.	
	5. mark appears on screen.	● This player cannot play PAL and SECAM format DVD discs.	
	6.Picture playback stops and the operation button can not be used.	● This player is compatible with Macro-Vision System copy guard. Some discs include a copy prevention signal, and when this type of disc is played back, stripes etc., may appear on some sections of the picture depending on the TV. (This is not a malfunction.)	
	7.The DVD picture is black and white.	● This player is compatible with analog copy protect technology copy guard. Some discs include a copy prevention signal and the copy guard system will prevent proper playback.	
		● The selected function does not operate for that disc.	
		● First stop the disc (press the ■ button), then start playback again.	
		● Component output is being selected even though connection is made to the Video out jacks. (Set the output setting's VIDEO OUT setting to NORMAL.)	P.35
Remote control	8.Remote control operation is not possible.	● The rear panel control input jacks on the player is being used.	p.8
	9.Improper operation of TV set, etc., occurs.	● The remote control is too far from the player, or the angle with the remote sensor is too sharp.	
		● The batteries are exhausted.	
		● Some TVs that have wireless remote control functions may not operate properly with this remote control.	
Audio	10.Audio is not output or is distorted.	● When the 5.1 CH mode is selected on DVDs that have been recorded with Dolby Digital audio, output from the 2 CH jacks and DIGITAL OUT jacks will be muted. In this case, please switch to the 2 CH mode.	p.48
		● When DTS audio is selected on DVDs that have been recorded with DTS audio, output will be from the DIGITAL OUT jacks only; audio will not be output from the 2 CH jacks or 5.1 CH jacks. To output audio from these jacks, please select another audio.	p.48
		● On DTS audio discs other than DVDs, there may be noise output from the 2 CH jacks and 5.1ch jacks. Please use the DIGITAL OUT jacks.	p.48
		● The digital output setting is set to 96KHz. Digital output is prohibited for some discs.	p.44~46
		● The connection plugs are not inserted fully into the terminals or are not connected.	
		● The connection plug or terminal is dirty.	
		● Audio cable connection is wrong.	
		● Connection is made to the stereo amplifier's PHONO input terminal.	
		● The pause mode is engaged.	
		● Stereo amplifier operation is wrong. (Check input (CD, AUX etc.) selector)	
	11. Noticeable difference in DVD and CD volume.	● Although you may notice a difference in volume between CDs and DVDs, this is a the result of a difference in disc recording methods.	

## Caution

Abnormal functioning of this unit may be caused by static electricity, or other external interference. To restore normal operation, unplug the AC power cord and then plug it in again.

# For Proper and Long Use

## ■ DO NOT MOVE THE UNIT DURING PLAYBACK

During playback, the disc rotates at high speed. Do NOT lift or move the unit during playback. Doing so may damage the disc.

## ■ WHEN MOVING THE UNIT

When changing places of installation or packing the unit for moving, be sure to remove the disc and return the disc table to its original position in the player. Then, switch the power OFF. **Check that the “-OFF-” indication on the display goes off**, then disconnect the power cord.

## ■ INSTALLATION

- Select a stable place to the side of a TV set or stereo system to be connected to the unit.
- When using the unit with a stereo system, install the speakers a little bit away from the TV.
- Do NOT install the unit on top of a TV or color monitor. Install the unit away from equipment that may be affected by magnetism, such as a cassette deck.

## ■ AVOID INSTALLING IN A PLACE THAT IS:

- Exposed to direct sunlight
- Exposed to humidity or where ventilation is poor
- Extremely hot or cold
- Exposed to vibration
- Exposed to dust
- Exposed to oily smoke, steam or heat (for example, a kitchen)

## ■ DO NOT PLACE AN OBJECT ON TOP

Do NOT place an object on the unit.

## ■ DO NOT BLOCK VENTS

Do NOT use the player on top of a long-fibered carpet, bed or sofa, and do not cover it with a cloth etc.. This will prevent heat radiation and could result in damage.

## ■ AVOID HEAT

Do NOT place the unit on equipment generating heat, such as an amplifier.

When installing the unit in a rack, place it on the lowest shelf possible (however, not where it is exposed to dust) and separated from the amplifier to avoid the heat generated by the amplifier or other audio equipment.

## ■ CAUTION: WHEN PLACING THE UNIT IN A STEREO RACK WITH GLASS DOORS


Be sure there is ample space between the unit and the glass doors when opening the disc table using the remote control. If the disc table opens against strong resistance, **such as a closed glass door**, damage to the unit may result.

## ■ CONDENSATION

Moisture will form in the operating section of the player if the player is brought from cool surroundings into a warm room or if the temperature of the room rises suddenly. When this happens, player's performance will be impaired.


To prevent this, let the player stand in its new surroundings for about an hour before switching it on, or make sure that the room temperature rises gradually.

Condensation may also form during the summer if the player is exposed to the breeze from an air conditioner. In such cases, change the location of the player.

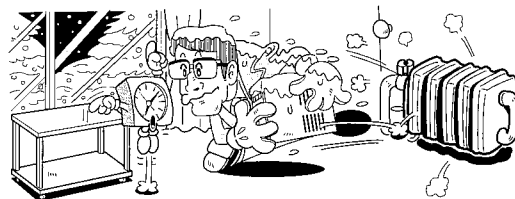

## ■ SWITCH THE POWER OFF WHENEVER NOT USING THE UNIT

Depending on the strength of the TV broadcast signal, having the TV set on while the power of the unit is ON may produce stripes on the TV screen. However, this is not a malfunction of this unit or the TV set. In such a case, switch the power of the unit OFF.

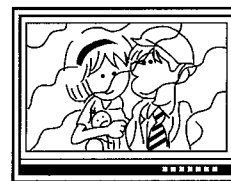

## POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed in such a way that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.

## CARE OF DISCS

### How to hold discs

 
When loading or removing discs, try not to touch their playing surfaces.




### Cleaning

Fingerprints or other dirt on the disc may affect sound and picture quality.

To clean your discs, use a soft clean cloth to wipe them. If necessary, moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints.



 Do not wipe in a circular direction  
(Concentric scratches in the disc groove tend to cause noise.)




Gently wipe from the inside toward the outer edge.

Discs must not be cleaned with record cleaning sprays, or static prevention sprays, etc. Also do not use volatile liquids such as benzine, or thinner, etc.

### NEVER PLAY CRACKED OR WARPED DISCS.

- The disc revolves in the player at high speed when it is played. Never play a cracked, scratched or warped disc. This may damage the player or cause it to malfunction.

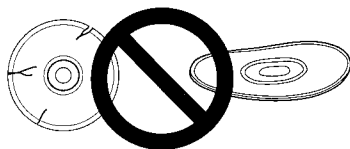

### After using discs, store them upright

After playing a disc, always remove it from the player and return it to its jacket. Then store it standing upright away from heat and humidity.

- Store discs carefully. If you store discs at an angle, or stacked on top of each other, discs may become warped even when in their jackets.
- Do not leave discs in locations such as the seat of a car, which may become excessively hot.

### CAUTION WHEN USING THE DISC

All rights reserved.

Unauthorized public performance, broadcasting or copying is a violation of applicable laws.

## CLEANING CARE


Use a soft, dry cloth for cleaning. For stubborn dirt, soak the cloth in a weak detergent solution; wring well first and wipe. Use a dry cloth to wipe it dry. Do not use any volatile agents such as benzine or paint thinner, as they may damage the surface of the player.

### Lens cleaner

The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, contact your nearest PIONEER authorized service center. Lens cleaners are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

## Notes on using the optional optical cable

- Do not route cords around sharp angles. When storing, wind the cords so that they have a diameter of at least 15 cm.
- When connecting, push all the way into the terminal.
- Do not use cords with a length of over 3m.
- If moisture or dust has collected on the plug, wipe it with a soft cloth before connecting.

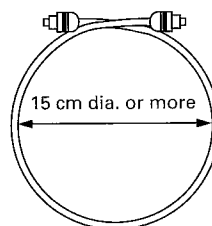

### Never use CD's with special shapes.

CD's with special shapes (heart-shaped CDs, octagonal CDs, etc.) cannot be played on this set.

Attempting to do so may damage the set. Do not use such CDs.



# Terms

## Dolby digital (AC-3)\*

The maximum 5.1 channels of audio used in the surround system (Surround Digital) for movie theaters is digital data compressed by AC-3.



For DVD discs, the digital output PCM/□□ jack (coaxial or optical) must be connected to the amplifier or processor's digital input AC-3/PCM jack.

## Virtual Dolby Surround\*\* TruSurround

Virtual surround sound can be enjoyed with 2 speakers. Select "ON" in the "Selecting a theater like 3-dimensional sound image (Virtual Dolby Surround)" section on page 27.

## PCM

PCM stands for Pulse Code Modulation and is digital audio. The digital audio of CD or DVD discs is PCM.

## Title number

Title numbers refer to titles of movies etc. As DVD discs have a large capacity, many movies can be recorded on one disc. For example, when 3 different movies are recorded on a disc, they are divided into TITLE 1, TITLE 2 and TITLE 3. Playback can be operated by selecting the title number.

## Chapter number

Chapter numbers are the numbers assigned to sections on a title of the disc, similar to chapters in a book. If the disc includes these numbers, you can locate the section you want very quickly using chapter search and other functions.

## Time number

The time number is the playback lapse time of a title in the disc from its beginning. The scene you want to locate can be searched for with the time number using the time number function etc..

## TOC

TOC (Table Of Contents) information is data other than audio signal data, recorded at the beginning of a disc. As the name implies, it's like the list of contents in a book, with information such as the number of songs and playback time.

## Video CDs

These discs provide MD quality sound, and VHS quality video images. Thanks to MPEG1, the digital signal compression system, a single disc provides up to 74 minutes of continuous digital audio and video. There are also Video CDs with Playback Control (PBC) that let you select playback of desired scenes using menus, and view still images.

\* Manufactured under license from Dolby Laboratories. "Dolby", "AC-3" and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works, © 1992-1997 Dolby Laboratories, Inc. All rights reserved.

\*\* SRS Labs, Inc.'s TruSurround system has been adopted as virtual technology. TruSurround is a trademark of SRS Labs, Inc. SRS and the SRS symbol are registered trademarks of SRS Labs, Inc. in the United States and selected foreign countries. TruSurround is incorporated under license from SRS Labs, Inc. Permission for use of TruSurround technology has been registered through SRS Labs, Inc.

## Terms

### Playback Control (PBC)

This refers to signals recorded on a Video CD (Version 2.0) enabling playback control.

You can use menus recorded on discs with PBC for easy, interactive search for desired scenes, and playback.

You can also enjoy viewing high-resolution/standard resolution still images. Playback is also possible without carrying out PCB operation. Refer to page 16 for Tips.

### High-resolution images

If the high-resolution still images are recorded on the Video CD, you can enjoy viewing them with four times the resolution of moving images.

### Multi-angle

When you watch regular TV programs you are watching the image filmed through the TV camera. Because of this the picture is displayed on your TV from the view point of the TV camera's position. In a TV studio the image is filmed by many cameras at the same time, and one of those images is selected by the program director and transmitted to your TV. If all the filmed images were transmitted to your TV you would be able to select the camera image you want. Some DVD discs are recorded with the angles of all camera's used for filming and these can be selected using this player. These types of discs are called multi-angle discs.

### Aspect

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a normal TV is 4:3, while the ratio of a Hi-vision TV or wide TV is 16:9. This allows you to enjoy a picture with a wider perspective.

### Parental level

This function was suggested by parents. Parental level restrictions are restrictions incorporated into scenes that parents do not wish their children to view.

### Condition memory

"Condition" refers to the various mode settings etc. On this player, various conditions, such as those set during playback etc. can be memorized. This function allows you to play back the same disc at any time without having to reset the condition settings.

### Subtitle

Subtitles are language titles superimposed on movies etc. Up to 32 different subtitle languages can be recorded on a DVD disc. The subtitle function can be used to select the language of your choice.

### Regional restriction codes (region number)

Regional restriction codes are built-in to DVD players and DVD discs for each sales region. If the regional code of the DVD player does not match one of the regional codes of the DVD disc, playback will not be possible.

- This unit's region No. is displayed on the rear panel.

### Optical digital output

Normally, audio is converted to an electric signal and transmitted through an electric wire from the player to the amplifier etc.. Changing this signal to a digital signal and transmitting it through an optical fibre cable is called optical digital output. (Optical digital input is the side receiving the signal such as the amplifier etc..)

The optical digital output setting can be changed on this unit.

- PCM/DOLBY DIGITAL: Choose this setting when connecting to the Dolby Digital (AC-3) optical digital input of an amp equipped with a Dolby Digital (AC-3) decoder.
- PCM: Choose this setting when connecting to the optical digital input of a regular amp, a Dolby Pro Logic amp etc.

### Dynamic range

Dynamic range refers to the difference between the maximum conversion level for transmission/conversion of distortion free signals and noise and/or the minimum level limited by the equipment's characteristics. Decibel units (dB) are used.

Other  
Information

Other  
Information

Other  
Information

Other  
Information

Other  
Information

Other  
Information



# Specifications

## General

System ..... DVD system and  
Compact Disc digital audio system  
Laser ..... Semiconductor laser: wavelength 650 nm  
Power requirements: ..... AC 120 V, 60 Hz  
Power consumption ..... 25 W  
Weight ..... 3.0 kg (6 lb 6 oz)  
Dimensions ..... 420 (W) x 284 (D) x 104 (H) mm  
(16 <sup>9</sup>/<sub>16</sub> x 11 <sup>5</sup>/<sub>16</sub> x 4 in.)  
(Not including protruding cables, etc.)  
Operating temperature ..... +5°C to +35°C (+36°F to +96°F)  
Operating humidity ..... 5% to 85% (no condensation)

## S-Video Output (2 pairs)

Y (luminance) - Output level ..... 1 Vp-p (75Ω)  
C (color) - Output level ..... 286 mVp-p (75Ω)  
Jacks ..... S-VIDEO jack

## Video Output (2 pairs)

Output level ..... 1 Vp-p (75Ω when loaded, synchronous negative)  
Jacks ..... RCA jacks

## Component Video Output

Output level ..... Y: 1.0 Vp-p, 75Ω, synchronous negative  
Cb, Cr: 0.7 Vp-p, 75Ω  
Jacks ..... RCA jacks

## Audio Output (2 pairs)

Output level  
During audio output ..... 200 mVrms (1 kHz, -20 dB)  
Number of channels ..... 2  
Jacks ..... RCA jacks



## Audio Output (5.1CH)

Output level ..... 200 mVrms (1 kHz, -20 dB)  
Number of channels ..... 6  
Jacks ..... RCA jack

## Digital audio characteristics

Frequency response	4 Hz to 22 kHz (DVD fs: 48 kHz) 4 Hz to 20 kHz (CD) 115 dB (EIAJ)
S/N ratio	DVD 103 dB (EIAJ)
Dynamic range	DVD 0.0020 %
Total harmonic distortion	Limit of measurement (±0.001% W. PEAK) or lower (EIAJ)
Wow and flutter	

## Other Terminals

Optical digital output (PCM/ ) ..... Optical digital jack  
Coaxial digital output (PCM/ ) ..... RCA jack  
Coaxial digital output (PCM) ..... RCA jack  
CONTROL IN ..... Minijack (3.5ø)

## Accessories

Remote control unit ..... 1  
AAA (R03) dry cell batteries ..... 2  
Audio cord ..... 1  
Video cord ..... 1  
Power cord ..... 1  
Operating Instructions ..... 1  
Warranty card ..... 1

## NOTE:

*The specifications and design of this product are subject to change without notice, due to improvement.*



## Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.



## We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

### Decibel

Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad

Information courtesy of the Deafness Research Foundation.





Published by Pioneer Electronic Corporation.  
Copyright © 1998 Pioneer Electronic Corporation.  
All rights reserved.

---

**PIONEER ELECTRONIC CORPORATION**

4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan

**PIONEER ELECTRONICS [USA] INC.** P.O. BOX 1540, Long Beach, California 90801-1540

**PIONEER ELECTRONICS OF CANADA, INC.** 300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada

**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium TEL: 03/570.05.11

**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 9586-6300

**PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.** San Lorenzo Num 1009 3er piso Desp. 302 Col. Del Valle, Mexico D.F. C.P. 03100 TEL: 5-688-52-90